

Saeco

Gran Baristo

Gran Baristo Avanti

USER MANUAL

Type HD8969 - HD8975 - HD8977 - HD8978

Read carefully before using the machine.

02

English



Tablet not included

 **Bluetooth®**

Only for Types HD8969, HD8977 and HD8978



Saeco Avanti App

 Available on the
App Store

Saeco Avanti App

GET IT ON
 **Google play**

Saeco Avanti App

CE 0051

Register your product and get support at

www.saeco.com/welcome

Avanti App is compatible with iPad 3/4/Air/mini retina, running iOS7 and newer; with Samsung Galaxy Tab 3 (8.0")/Tab 4 (10.1")/Note pro LTE (12.2"), Nexus 7 2013 (7"), Sony Xperia Z LTE (10.1"), running Android v.4.3 and newer, and Bluetooth version 4.0 and newer.

EN

02

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock and injury to persons do not immerse cord, plugs, or appliance in water or other liquid.
4. Close supervision is necessary when the appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always attach plug to appliance first, then plug cord into wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Save these instructions.

SAVE THESE INSTRUCTIONS

CAUTION

This appliance is for household use only. Any servicing, other than cleaning and user maintenance, should be performed by an authorized service center. Do not immerse machine in water. To reduce the risk of fire or electric shock, do not disassemble the machine. There are no parts inside the machine serviceable by the user. Repair should be done by authorized service personnel only.

1. Check voltage to be sure that the voltage indicated on the nameplate corresponds with your voltage.
2. Never use warm or hot water to fill the water tank. Use cold water only.
3. Keep your hands and the cord away from hot parts of the appliance during operation.
4. Never clean with scrubbing powders or harsh cleaners. Simply use a soft cloth dampened with water.
5. For optimal taste of your coffee, use purified or bottled water. Periodic descaling is still recommended every 2-3 months.
6. Do not use caramelized or flavored coffee beans.

INSTRUCTIONS FOR THE POWER SUPPLY CORD

- A. A short power-supply cord (or detachable power-supply cord) is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- B. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- C. If a long detachable power-supply cord or extension cord is used,
 1. The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance
 2. If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and
 3. The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

Congratulations on your purchase of a Saeco GranBaristo Avanti fully automatic coffee machine!

To fully benefit from the support that Saeco offers, please register your product at www.saeco.com/welcome.

This user manual applies to HD8969 - HD8975 - HD8977 - HD8978.

The machine is suitable for preparing espresso coffee using whole coffee beans, and it is supplied with a milk carafe to prepare a perfect Cappuccino or Latte Macchiato in a quick and easy way. In this user manual you will find all the information you need to install, use, clean and descale your machine.

Visit www.philips.com/support to download the latest version of the user manual and the EC declaration of conformity (see product code on the cover).

CONTENTS

IMPORTANT	4
Safety Instructions.....	4
Warnings.....	4
Cautions.....	6
Electromagnetic Fields.....	7
Disposal.....	8
Declaration of Conformity.....	9
INSTALLATION	10
Product Overview.....	10
General Description.....	11
PREPARING FOR USE	12
Machine Packaging.....	12
Machine Installation.....	12
Demo Mode Function.....	14
USING THE MACHINE FOR THE FIRST TIME	15
Language Selection.....	15
Automatic Rinse/Cleaning Cycle.....	16
Manual Rinse Cycle.....	17
MEASURING AND PROGRAMMING WATER HARDNESS	20
AQUACLEAN WATER FILTER	22
Preparing and Installing the AquaClean Filter.....	22
Activating the AquaClean Filter.....	23
Replacing the AquaClean Filter.....	25
Information on Filter Capacity.....	26
How to Replace the Filter.....	27
Replacing the Filter after Using 8 Filters.....	28
BLUETOOTH CONNECTION ONLY FOR HD8969, HD8977 AND HD8978	29
COFFEE PROFILE	32
Enabling a New Profile.....	32
Profile Selection.....	33
Disabling a User Profile.....	34
ADJUSTMENTS	36
Saeco Adapting System.....	36
Adjusting the Ceramic Coffee Grinder.....	36
Adjusting the Aroma (Coffee Strength).....	37
Adjusting the Dispensing Spout.....	38
Adjusting the Coffee Quantity.....	40

BREWING COFFEE	41
Brewing Coffee Using Coffee Beans	41
Brewing Coffee Using Pre-Ground Coffee	42
MILK CARAFE.....	44
Filling the Milk Carafe.....	44
Inserting the Milk Carafe	45
Removing the Milk Carafe.....	45
Emptying the Milk Carafe	46
DISPENSING MILK-BASED BEVERAGES	47
Quick Carafe AUTO CLEAN Cycle.....	50
Adjusting Milk-Based Product Length	51
SPECIAL BEVERAGES	53
Hot Water	53
Adjusting Hot Water Dispensing	55
Special Beverages Menu for Dispensing Other Beverages	56
Adjusting the Quantity of the Other Beverages for the "Special Beverages" Menu	57
BEVERAGE PROGRAMMING	58
Strength	59
Coffee Amount.....	59
Temperature	59
Taste	60
Milk Amount.....	60
HOT WATER PROGRAMMING.....	60
Water Amount.....	60
RESTORING BEVERAGE PARAMETERS	61
MACHINE PROGRAMMING	62
Water Settings.....	63
Language Settings.....	63
Stand-by Settings.....	63
Button Sound	63
Bluetooth Connection (only for HD8969, HD8977 and HD8978)	64
Factory Settings.....	64
STATISTICS	65
MAINTENANCE	66
Descaling.....	66
Brew Group Cleaning Cycle	67
Carafe Cleaning.....	67
CLEANING AND MAINTENANCE	68
Daily Cleaning of the Machine	68
Daily Cleaning of the Water Tank.....	70
Daily Cleaning of the Milk Carafe	70
Weekly Cleaning of the Milk Carafe.....	73
Weekly Cleaning of the Brew Group.....	77
Monthly Cleaning of the Milk Carafe.....	81
Monthly Lubrication of the Brew Group.....	85
Monthly Cleaning of the Brew Group with "Coffee Oil Remover"	86
DESCALING.....	89
Interruption of the Descaling Cycle	94
DISPLAY MESSAGES	95
TROUBLESHOOTING.....	97
ENERGY SAVING.....	100
Stand-by.....	100
TECHNICAL SPECIFICATIONS.....	101
WARRANTY AND SERVICE	102
Warranty	102
Service.....	102
ORDERING MAINTENANCE PRODUCTS	102

IMPORTANT

Safety Instructions

This machine is equipped with safety devices. Nevertheless, read and follow the safety instructions carefully and only use the machine properly as described in these instructions to avoid accidental injury or damage due to improper use of the machine. Keep this user manual for future reference.



The term **WARNING** and this icon warn against possible severe injuries, danger to life and/or damage to the machine.



The term **CAUTION** and this icon warn against slight injuries and/or damage to the machine.



This icon prompts you to read this instruction manual carefully before any use or maintenance operation.

Warnings

- In case of using the machine remotely connected via mobile application, the user must make sure that:
 - The machine has been correctly installed.
 - The machine is only operated from a short distance (i.e. in the user's line of sight).
 - There are no vulnerable persons / children near the machine during operation.
- Connect the machine to a wall socket with a voltage matching the technical specifications of the machine.
- Connect the machine to an earthed wall socket.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.

- Never immerse the machine, the mains plug or power cord in water: danger of electrical shock!
- Do not pour liquids on the power cord connector.
- Never direct the hot water jet towards body parts: danger of burning!
- Do not touch hot surfaces. Use handles and knobs.
- After turning off the machine by switching the power button on its back, remove the plug from the wall socket:
 - if a malfunction occurs;
 - If the machine will not be used for a long time;
 - before cleaning the machine.
- Pull on the mains plug, not on the power cord.
- Do not touch the mains plug with wet hands.
- Do not use the machine if the mains plug, the power cord or the machine itself is damaged.
- Do not make any modifications to the machine or its power cord. Only have repairs carried out by a service centre authorised by Philips to avoid any hazard.
- The machine should not be used by children younger than 8 years old.
- The machine can be used by children of 8 years and upwards if they have previously been instructed on the correct use of the machine and made aware of the associated dangers or if they are supervised by an adult.
- Cleaning and maintenance should not be carried out by children unless they are more than 8 years old and supervised by an adult.

- Keep the machine and its power cord out of reach of children under 8 years old.
- The machine may be used by persons with reduced physical, sensory or mental capabilities or lacking sufficient experience and/or skills if they have previously been instructed on the correct use of the machine and made aware of the associated dangers or if they are supervised by an adult.
- Children should be supervised to ensure that they do not play with the machine.
- Never insert fingers or other objects into the coffee grinder.

Cautions

- The machine is for household use only. It is not intended for use in environments such as canteens, staff kitchens of shops, offices, factories or other work environments.
- Always put the machine on a flat and stable surface.
- Do not place the machine on hot surfaces, directly next to a hot oven, heater units or similar sources of heat.
- Only put roasted coffee beans into the coffee bean hopper. If ground coffee, instant coffee, raw coffee or any other substance is put in the coffee bean hopper, it may damage the machine.
- Let the machine cool down before inserting or removing any parts. The heating surfaces may retain residual heat after use.

- Never use warm or hot water to fill the water tank. Use only cold non-sparkling drinking water.
- Never clean with scrubbing powders or harsh cleaners. Simply use a soft cloth dampened with water.
- Descale your machine regularly. Not doing this will make your appliance stop working properly. In this case, repair is not covered under your warranty!
- Do not keep the machine at temperature below 0 °C. Residue water in the heating system may freeze and cause damage.
- Do not leave water in the water tank if the machine is not used over a long period of time. The water can get contaminated. Use fresh water every time you use the machine.
- Keep in mind that this is a connected device with a potential risk of being accessed by unauthorised people. If you detect any inexplicable behaviours, please contact the Philips service centre.
- Carefully place the machine in your household in order not to reduce its field of action when operating it via the App (away from routers, microwave ovens, docking stations, etc.).

Electromagnetic Fields

This appliance complies with all the applicable standards and regulations relating to the exposure to electromagnetic fields.



Disposal

This symbol on a product indicates that the product is covered by EU Directive 2012/19/EU. Please inform yourself about the local separate collection system for electrical and electronic products. Follow local regulations and do not dispose of the product as household waste. Appropriate disposal of old products helps prevent negative consequences for the environment and human health.

Declaration of Conformity

Philips Consumer Lifestyle B.V.

PHILIPS

426

2014/07

(Document No. / Report Numero)

(Year, Month (yyy/mm) in which the CE mark is affixed / Anno di apposizione della marcatura CE)

EUROPEAN DECLARATION OF CONFORMITY

(DICHIARAZIONE DI CONFORMITA' CE)

We, PHILIPS CONSUMER LIFESTYLE B.V.

(Company name / denominazione sociale)

TUSSENDIEPEN 4, 9206 AD DRACHTEN, THE NETHERLANDS

(address / sede)

declare under our responsibility that the product(s): HD8969, HD8968, HD8967

(dichiara sotto la propria responsabilità che il/i Prodotto/i elettrico/i)

Philips

(brand name, marchio)

(Type version or model, modello o versione)

ESPRESSO COFFEE MAKER WITH GRINDER

(product description, descrizione del prodotto)

to which this declaration relates is in conformity with the following harmonized standards:

(al quale la presente dichiarazione si riferisce è conforme alle seguenti norme tecniche armonizzate)

EN 60335-1: (2012)
 EN 60335-2-15:(2002), Am1 (2005), Am2 (2008), A11 (2012)
 EN 62233: (2008)
 EN 55014-1: (2006), Am1 (2009), Am2 (2011)
 EN 61000-3-2: (2006), Am1 (2009), Am2 (2009), EN 61000-3-3: (2008)
 EN 55014-2: (1997), Am1 (2001), Am2 (2008)
 EN 50564: (2011), EN 50581: (2012)
 EN 300 328: (2012) V1.8.1 & V1.7.1, EN 301 489-1: (2011) V1.9.2
 EN 301 489-17: (2012) V2.2.1, EN 62479: (2010)

following the provisions of :

(secondo le disposizioni della)

2006/95/EC
 2004/108/EC
 2009/125/EC, EC/1275/2008
 2011/65/EC
 1999/5/EC

And are produced under a quality scheme at least in conformity with ISO 9001 or CENELEC Permanent Documents

(e i processi produttivi seguono un sistema qualità conforme almeno alla norma ISO 9001 o ai documenti permanenti CENELEC)

Only for Medical Devices and R&TTE products:

The Notified Body: IMQ 0051

performed: EMC R&TTE

(L'ente notificatore notificato) (Name and number/ denominazione e numero)

(ha eseguito) (description of intervention / descrizione dell'intervento)

and issued the certificate: 0532-ARSO00045

(ed emesso il certificato) (certificate number / numero del certificato)

Remarks:



Drachten, 17-jun-14


(place, date / luogo e data)

A. Speelman, CL Compliance Manager

(signature, name and function / firma, nome e funzione)

INSTALLATION

Product Overview

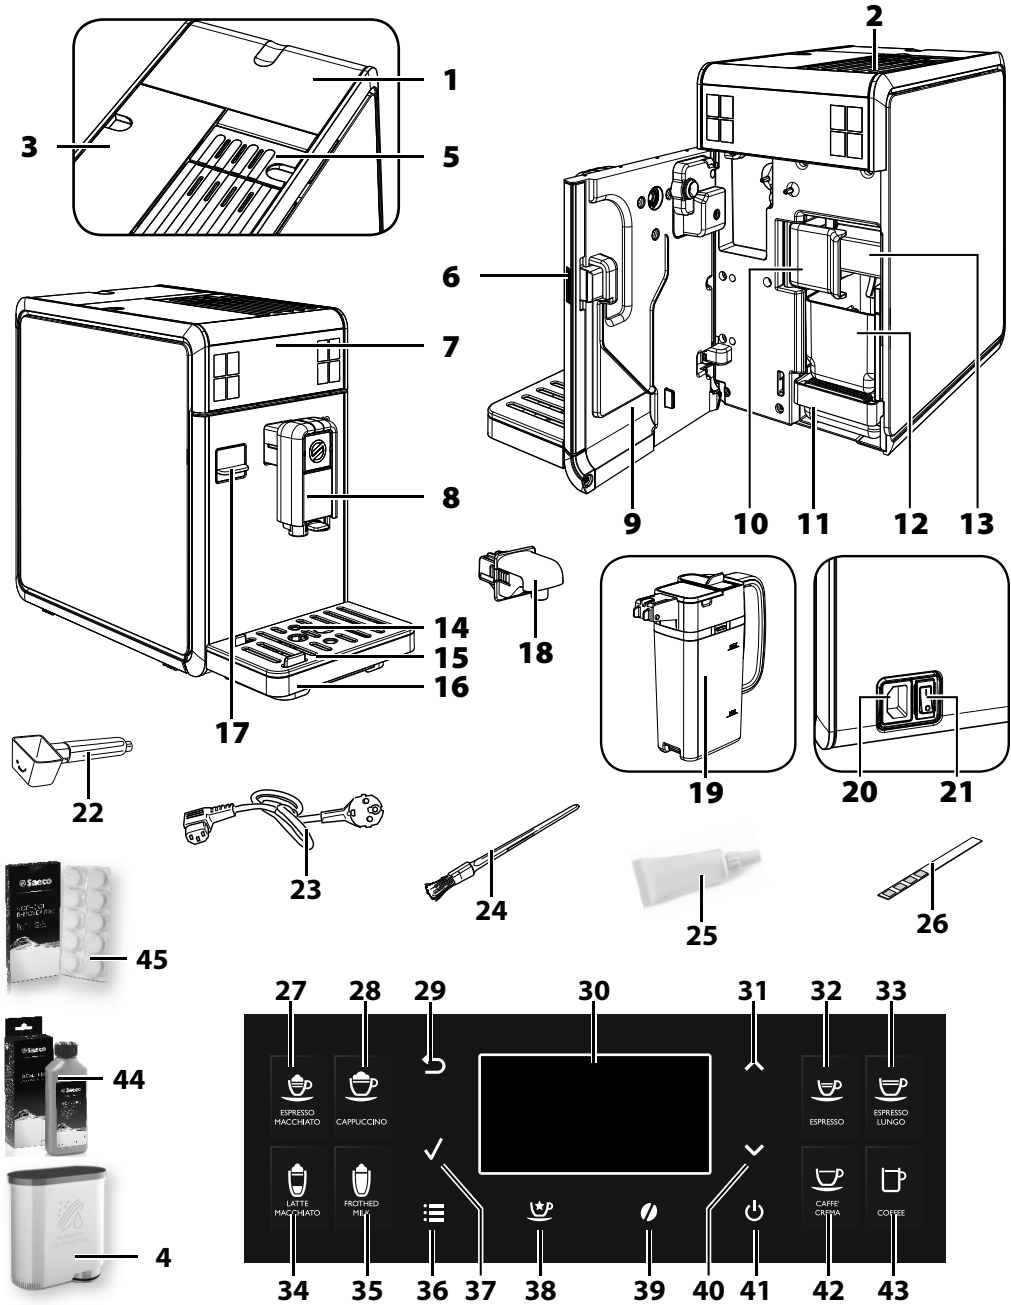

General Description

1. Coffee bean hopper + lid
2. Cup-warming surface
3. Water tank + lid
4. AcquaClean filter (optional)
5. Pre-ground coffee compartment
6. Service door button
7. Control panel
8. Removable coffee dispensing spout
9. Service door
10. Brew group locking/removal handle
11. Drip tray (internal)
12. Coffee grounds drawer
13. Brew group
14. Full drip tray indicator
15. Cup holder grill
16. Drip tray (external)
17. Protection lid
18. Water dispensing spout (removable)
19. Milk carafe
20. Power cord socket
21. Power button
22. Pre-ground coffee measuring scoop / grinder adjustment key
23. Power cord
24. Cleaning brush (optional)
25. Grease for brew group (optional)
26. Water hardness test strip
27. Espresso Macchiato button
28. Cappuccino button
29. "ESC" button
30. LCD Display
31. "UP" button
32. Espresso button
33. Long Espresso button
34. Latte Macchiato button
35. Frothed Milk button
36. "MENU" button
37. "OK" button
38. "Special beverages" button
39. "Aroma" - Pre-ground coffee button
40. "DOWN" button
41. Stand-by button
42. Caffè crema button
43. Coffee button
44. Descaling solution (optional)
45. Coffee oil remover (optional)



PREPARING FOR USE

Machine Packaging

The original packaging has been designed and constructed to protect the machine during transport. We recommend keeping the packaging material for possible future transport.

Machine Installation


- 1 Remove the drip tray with grill and the carafe from the packaging.
- 2 Remove the machine from the packaging.
- 3 For best use, it is recommended to:
 - Choose a safe, level surface where there will be no danger of overturning the machine or being injured.
 - Choose a location that is sufficiently well-lit, clean and near an easily reachable socket.
 - Allow for a minimum distance from the sides of the machine as shown in the figure.

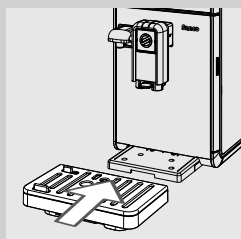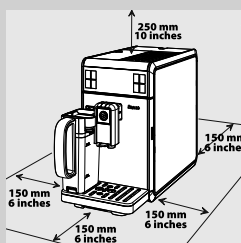


- 4 Insert the drip tray (external) with grill all the way into the machine. Make sure that it is correctly placed; a "CLICK" will confirm that it is locked into place.

Note:


The drip tray collects the water that comes out of the dispensing spout during each rinse/self-cleaning cycle, as well as any coffee that might be spilled during beverage dispensing. Empty and wash the drip tray daily and each time the full drip tray indicator is raised.

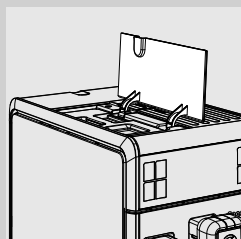

- 5 Lift the left outer lid.

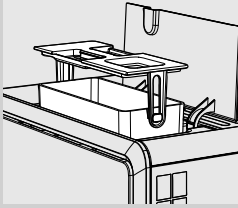

- 6 Remove the water tank by using the handle incorporated on the inner lid.

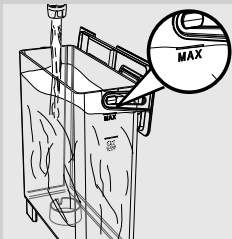


- 7 Rinse the water tank with fresh water.

- 8 Fill the water tank with fresh drinking water up to the MAX level and put it back into the machine. Make sure it is fully inserted.



Caution:

Never fill the water tank with warm, hot, sparkling water or any other liquid, as this may cause damage to the water tank and the machine.

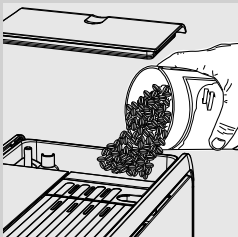

- 9 Remove the coffee bean hopper lid. Slowly pour in the coffee beans.




Note:

The coffee bean hopper contains a tray that vibrates during grinding and conveys the beans into the coffee grinder.




Caution:

Only coffee beans must be put into the coffee bean hopper. If ground coffee, instant coffee, caramelized coffee, raw coffee beans or any other substance is put in the coffee bean hopper, it may damage the machine.

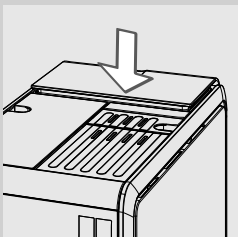


- 10 Put the lid back on the coffee bean hopper.

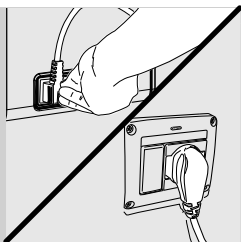


11 Insert the plug into the socket located on the back of the machine.

12 Insert the plug on the other end of the power cord into a wall socket with suitable power voltage.

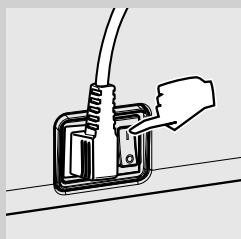

13 Switch the power button on the back of the machine to "I" to turn on the machine.

Demo Mode Function

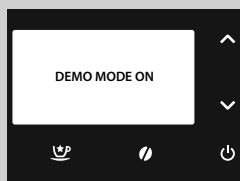

The machine is equipped with an operation simulating function. By keeping the "⏻" button pressed for more than 8 seconds, the machine enters the demo mode. To exit the demo, disconnect the power cord and turn the machine back on.

USING THE MACHINE FOR THE FIRST TIME

When using the machine for the first time, the following activities need to happen:

- 1) You have to select the language.
- 2) The machine will perform an automatic rinse/cleaning cycle.
- 3) You need to perform a manual rinse cycle.

Language Selection


At first start-up, the language must be selected.




- 1 This display is shown. Select the desired language by pressing the "▼" or "▲" scrolling button.



- 2 Press the "✓" button to confirm.

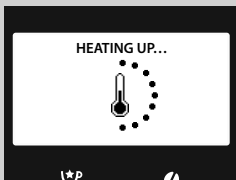

- 3 The machine is warming up.

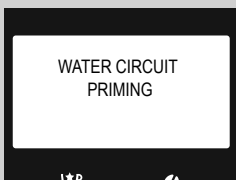


- 4 Once warm-up has been completed, the machine automatically performs the water circuit priming.

Automatic Rinse/Cleaning Cycle

When warm-up has been completed, the machine automatically performs a rinse/self-cleaning cycle of the internal circuits with fresh water. This takes less than a minute.



- 1 Place a container under the coffee dispensing spout to catch the small amount of water which will be dispensed.

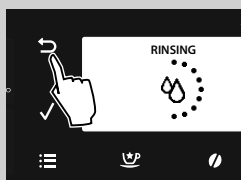


- 2 This display is shown. Wait for the cycle to finish automatically.



Note:

To stop dispensing, press the “↶” button.

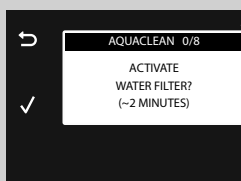

- 3 When the operations described above have been completed, the machine shows this display. The display shows this icon to indicate that the AquaClean filter must be installed.



Note:

For further information on the filter and how to install it, please refer to the “AquaClean Water Filter” chapter. If you wish to install it later, press the “↶” button and move on to the manual rinse cycle.



Note:

The “📶” icon is only displayed if your machine is equipped with a Bluetooth interface and if you have enabled it.

Manual Rinse Cycle

You need to perform a rinse cycle when using the machine for the first time. During this process, the coffee brewing cycle is activated and fresh water flows through the dispensing spout. This takes a few minutes.



- 1 Place a container under the coffee dispensing spout.



- 2 Check that the machine shows this display.



- 3 Press the "☉" button to access the aroma selection menu.



- 4 To select the pre-ground coffee brewing function, press the "∨" or "∧" scrolling button until the "☉" icon is displayed.

Note:


Do not add pre-ground coffee into the compartment.



- 5 Press the "☉" button.



- 6** When choosing the product, the machine asks you to confirm that ground coffee has been inserted. Press the “✓” button. The machine will start dispensing water from the coffee dispensing spout. When dispensing has been completed, empty the container.

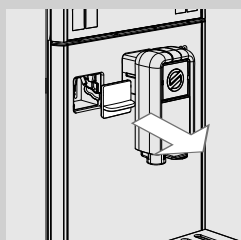


- 7** Remove the protection cover.




Note:


Store the cover with care.

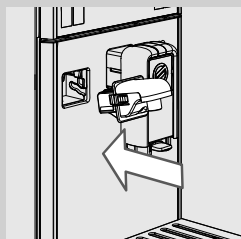

- 8** Slightly tilt the water dispensing spout and insert it all the way into the guides of the machine. Push the water dispensing spout towards the bottom while rotating it at the same time until it is locked into the machine as shown in the figure.

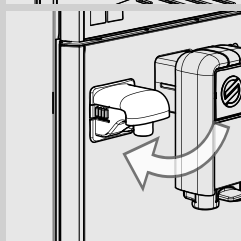

- 9** Place an empty container under the hot water dispensing spout.

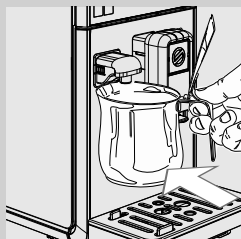

- 10** Press the “☺” button.






11 Press the “✓” button.




12 Press the “✓” button. At the end of the warm-up phase, the machine starts dispensing water.

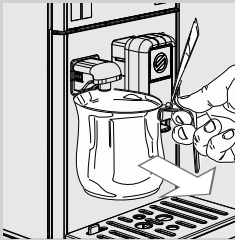


13 After dispensing water, remove and empty the container.

14 Repeat the steps from 10 to 13 until the water tank is empty, then continue with step 15.

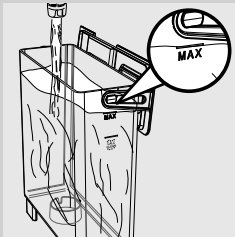

15 At the end, fill the water tank again up to the MAX level. Now the machine is ready to brew coffee. This icon will be displayed.

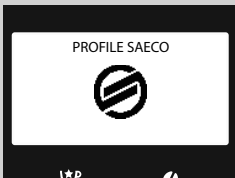

Note:


When you have not used the machine for 2 or more weeks, the machine will automatically perform a rinse/self-cleaning cycle after you turn it on. Following this, you need to perform a manual rinse cycle as described above.

The automatic rinse/self-cleaning cycle also starts when the machine has been in stand-by mode, or turned off, for more than 15 minutes. At the end of the cycle, you can brew products.

MEASURING AND PROGRAMMING WATER HARDNESS

Measuring water hardness is very important in order to define the descaling frequency and to install the "AquaClean" water filter (for more details on the water filter, see next chapter).

To measure water hardness, follow the steps below:

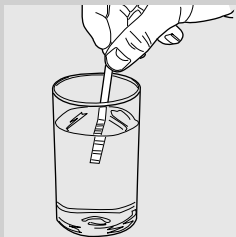


- 1 Immerse the water hardness test strip (supplied with the machine) in water for 1 second.



Note:

The test strip can only be used for one single measurement.

- 2 Wait for one minute.

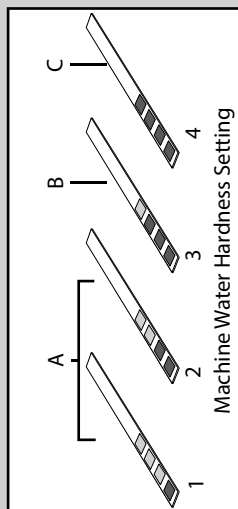

- 3 Check how many squares have changed to red, then consult this table.



Note:

The numbers on the water hardness test strip correspond to the water hardness adjustment settings.

More precisely:

1 = 1 (very soft water)

2 = 2 (soft water)


3 = 3 (hard water)

4 = 4 (very hard water)


The letters correspond to the references that are located at the base of the "AquaClean" water filter (see next chapter).




- 4 Press the "☰" button to access the machine main menu.

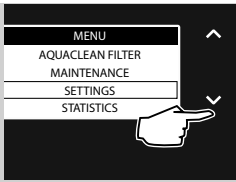


5 Press the “✓” button to select “**SETTINGS**”.

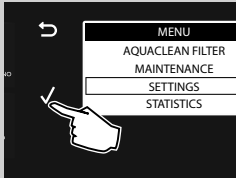

6 Press “✓” to confirm.

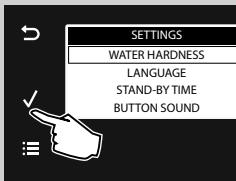


7 Press “✓” to confirm the “**WATER HARDNESS**” selection.

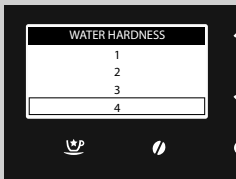

8 Press “✓” to confirm the “**WATER HARDNESS**” selection.


 **Note:**

The machine is supplied with a standard water hardness setting, suitable for most types of water.

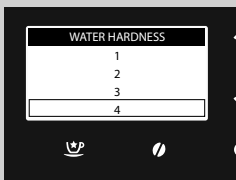

9 Press the “✓” button to increase the value or the “^” button to decrease the value.

10 Press the “✓” button to confirm the setting.

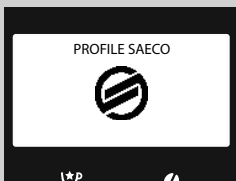

11 Press the “☰” button to exit the programming menu. Now the machine is ready for brewing.

AQUACLEAN WATER FILTER



The AquaClean filter is designed to reduce limescale build-up inside the machine and to provide filtered water in order to preserve the coffee aroma and flavour in each cup. By using the series of 8 AquaClean filters as indicated in this user manual, you will not need to descale the machine for 2 years or for the next 5000 cups (with 100-ml capacity).



Note:

Replace the AquaClean filter when the filter icon on the display starts flashing. Replace the AquaClean filter at least each 3 months, even if the machine is yet to inform you that it needs to be replaced.


After the machine has been used for a given time, it will require the filter to be replaced. This will allow you to replace the filter 8 times (equal to about 5000* beverages!) before having to descale the machine.

(*) Using 100-ml cups.

Preparing and Installing the AquaClean Filter



- 1 Remove the AquaClean filter from its packaging, shake it for 5 seconds and immerse it vertically (with the opening positioned upwards) in cold water, delicately pressing the sides so as to let the air bubbles out.

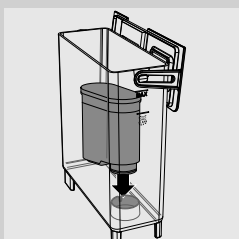


- 2 Put the AquaClean filter into the empty water tank. You can leave the small water filter in place. Press the AquaClean filter down until it cannot move any further.

Activating the AquaClean Filter


You can install the AquaClean filter when first installing the machine as part of the overall installation procedure. If you did not install the AquaClean filter upon first use, you can install it later by accessing the menu as described here below.




- 1 Press the “☰” button to access the machine main menu.

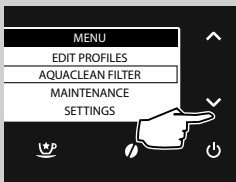

- 2 Press the “✓” button to select “AQUACLEAN FILTER”.

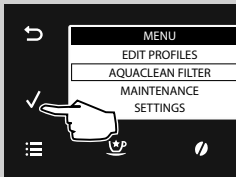

- 3 Press “✓” to confirm.

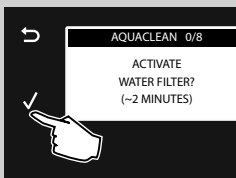

- 4 The display shows the number of AquaClean filters previously installed, from 0 to 8. The display asks you if you wish to activate the filter. Press the “✓” button to confirm the filter activation procedure.


Note:

If you do not wish to activate the filter, exit the menu by pressing the “↶” button.


Note:

The number of filters previously installed is displayed in the upper right-hand corner of the screen. In this case, the screen indicates that the filter being installed is the first one. This number is very important: after the


eighth filter (when the display shows **8/8**), the machine will require a descaling cycle to be performed when installing the next filter.

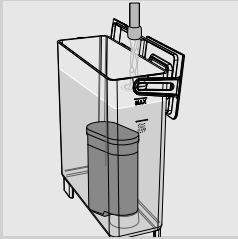


- 5** The display is prompting you to insert the filter and to fill the water tank. Prepare the AquaClean filter and place it inside the water tank (refer to "Preparing and Installing the AquaClean Filter"). Fill the water tank up to the MAX level.

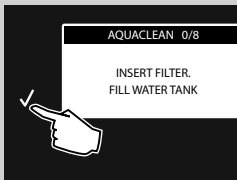

- 6** Press "✓" to confirm.

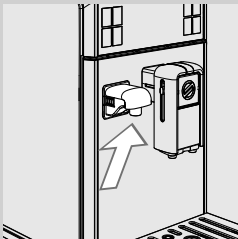


- 7** Check that the water dispensing spout is correctly installed.

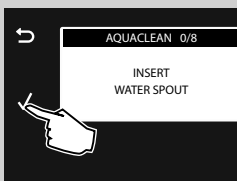


- 8** Press "✓" to confirm.



9 Place a container under the hot water dispensing spout.

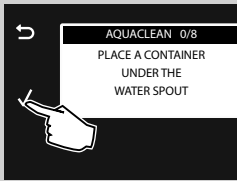

10 Press "✓" to confirm.

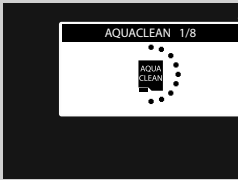

11 The machine starts dispensing water. This screen is displayed.



12 When the machine stops dispensing, remove and empty the container. The machine shows this display. The icon shows the capacity of the AQUACLEAN filter that you have just installed. The 100% AquaClean icon appears on the machine-ready screen to indicate that the filter has been activated.

Replacing the AquaClean Filter

Replace the AquaClean filter when the filter icon on the display starts flashing.


Information on Filter Capacity




1 When installing a new filter, the status indication on top of the filter icon is 100%.




2 This percentage gradually decreases from 100% to 20% with use.

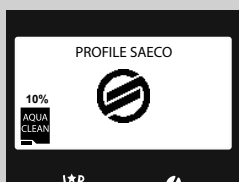

3 When filter capacity drops below 10%, the filter icon flashes on and off for 2 seconds. This indicates that filter performance has decreased to the point where the filter needs to be removed and replaced with a new one.

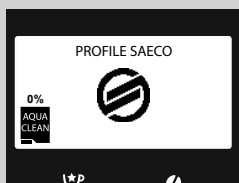

4 If you do not replace the filter, the filter icon flashes on and off for 1 second when filter capacity drops to 0%. If you ignore this warning, the display will not show the filter icon anymore.

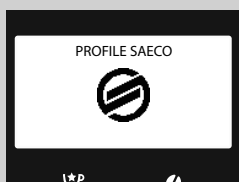

5 If the filter icon is not displayed anymore, you will need to descale the machine before installing a new filter.


! **Caution:**

If the filter is not replaced promptly, the machine will require a descaling cycle to be performed.

How to Replace the Filter



- 1 Press the "☰" button to access the machine main menu. Press the "✓" button to select "AQUACLEAN FILTER". Press "✓" to confirm.

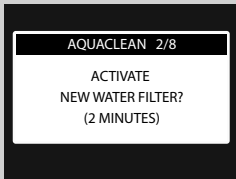

- 2 The display shows the number of AquaClean filters previously installed, from 0 to 8. The display asks you if you wish to activate a new filter. Press the "✓" button to confirm.

- 3 Follow the instructions shown on the display to install a new filter, fill the water tank and insert the hot water dispensing spout. Press the "✓" button to confirm each step.

- 4 A bar showing the filter activation progress status is displayed on the filter activation screen.




- 5 When the operations described above have been completed, the machine shows this display. The 100% AquaClean icon appears on the machine-ready screen to indicate that the filter has been activated.




Caution:

If the filter used is the last one of the 8-filter series, the machine will ask for descaling before activating a new filter. Refer to the chapter relating to machine descaling.

Replacing the Filter after Using 8 Filters

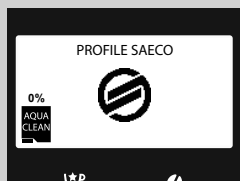

- 1 Press the "☰" button to access the machine main menu. Press the "✓" button to select "AQUACLEAN FILTER". Press "✓" to confirm.

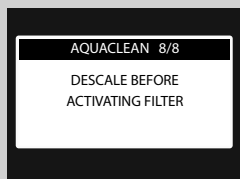

- 2 The display indicates that you need to descale the machine before activating a new filter. Press the "✓" button to start the descaling procedure.

Note:

If you do not wish to start the descaling procedure right now, press the "↶" button several times to exit the filter menu.

- 3 When the descaling procedure has been completed, the display asks you if you wish to install the AquaClean filter. Follow the steps described under "Replacing the AquaClean Filter". Replace the filter as described in the previous section.

BLUETOOTH CONNECTION only for HD8969, HD8977 and HD8978

Download the application on your mobile device to access the machine functions.

To connect GranBaristo Avanti with your mobile device, download the Saeco Avanti App available on the App Store and Google Play or scan the QR code on the cover with your mobile device. As an alternative, connect to the www.saeco.com/Avanti-app website using the device on which you wish to download the application.


**Note:**

Before starting the connection procedure, make sure that the Bluetooth function on your mobile device is active.


The GranBaristo Avanti Bluetooth function is enabled by default. If it is disabled, follow the instructions below to enable it again:




- 1 Press the “☰” button to access the machine main menu.

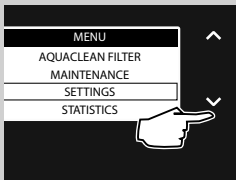


- 2 Press the “▼” button to select “**SETTINGS**”. Press “✓” to confirm.

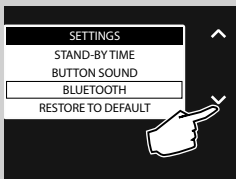


- 3 Press the “▼” button to select “**BLUETOOTH**”.

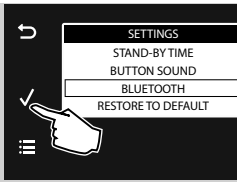


4 Press “✓” to confirm.

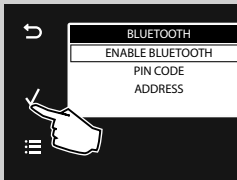


5 The “BLUETOOTH” management menu is displayed. Press “✓” to enable the function in the machine and to set up a connection with your mobile device.

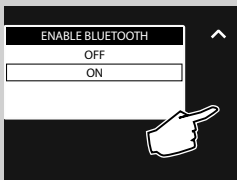


6 Press the “▼” button to select “ON”.

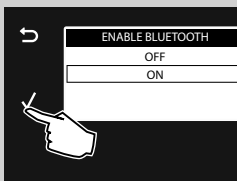


7 Press “✓” to confirm. The Bluetooth device is now active.

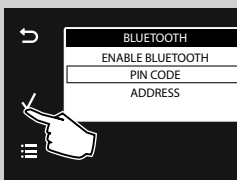


8 Press the “▼” button to select “PIN CODE”. Press “✓” to confirm.

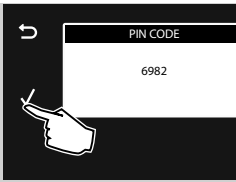

- 9** Write down the code, as it will be requested when connecting with your mobile device.

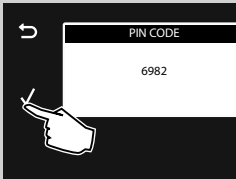

- 10** Press "✓" to confirm. Press the "☰" button to exit.

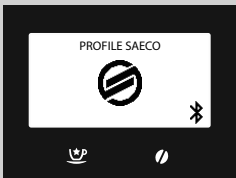

- 11** Enter the PIN code when you are prompted by the application and wait for a successful connection.

The "⌘" icon shown on the display indicates that a connection was successfully established. Now you can interact with your coffee machine directly from your mobile device.



Warning:

**Use the Saeco Avanti App to control your Gran Baristo only when you can see the machine in order to avoid injury or damage!
You cannot use the pre-ground coffee function when operating the machine via the App.**



Caution:

If you enter the wrong PIN code 5 times in a row, the machine disables the Bluetooth connection for safety reasons. Therefore, you will need to enable it again as previously explained.




Note:

Avanti App is compatible with iPad 3/4/Air/mini retina, running iOS7 and newer; with Samsung Galaxy Tab 3 (8.0")/Tab 4 (10.1")/Note pro LTE (12.2"), Nexus 7 2013 (7"), Sony Xperia Z LTE (10.1"), running Android v.4.3 and newer, and Bluetooth version 4.0 and newer.


COFFEE PROFILE

The machine can accommodate the individual preferences and settings of up to 6 different profiles.

The machine has 1 preset profile indicated by the icon on the left.

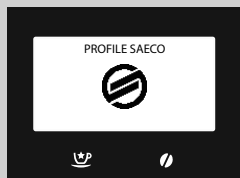


You can create 5 additional profiles, which can be entirely customized. For a quick reference, users are represented by a unique icon, which has to be selected during programming.

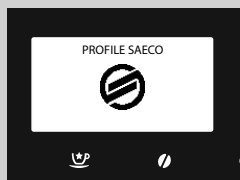


Note:

Please refer to the **"Enabling a New Profile"** chapter for information on how to create the other 5 user profiles so that you can customize the beverages according to your taste.

Enabling a New Profile

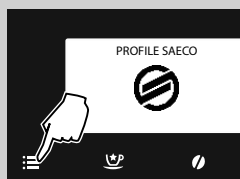


- 1 Press the "☰" button to access the machine main menu.

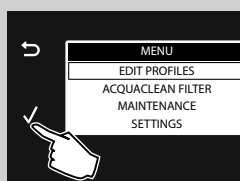


- 2 Press "✓" to confirm.



3 Press the “√” button to select “ENABLE NEW PROFILE”.

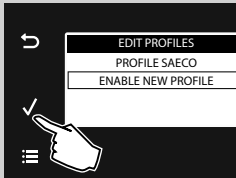

4 Press “√” to confirm.

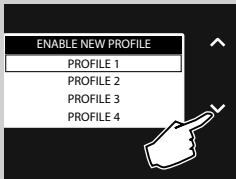

5 Press the “√” button or the “^” button to select the desired profile, which will be represented by a unique icon.



Note:

When a profile has already been enabled, it is not displayed among the possible options.




7 You can now customize the beverages (see the “Beverage Programming” chapter).



Note:

Press the “☰” button to exit.

Profile Selection

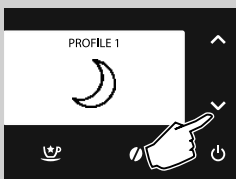

Press the “√” button or the “^” button to select the profiles stored in the machine. The settings associated with the currently displayed profile are immediately active.



Note:

When 1 or more profiles are enabled, the “√” button and the “^” button are active on the main screen.


Disabling a User Profile

You can disable an already enabled user profile, but not the preset profiles.




Note:


In this case, all the profile settings are kept in the memory but are not displayed. The respective icon is now available again in the enabling options. To enable the profile again, refer to the **“Enabling a New Profile”** section.

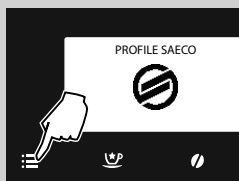


- 1 Press the “☰” button to access the machine main menu.

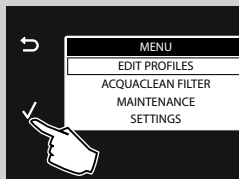

- 2 Press “✓” to confirm.

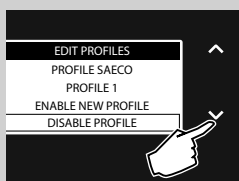

- 3 Press the “✓” button to select **“DISABLE PROFILE”**.

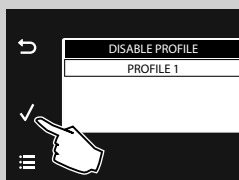


- 4 Press the “✓” button to select the profile to be disabled. Press the “✓” button to confirm. The profile is now disabled.




Note:

All the profiles enabled earlier on will be shown on this screen. Only the selected profile will be disabled.

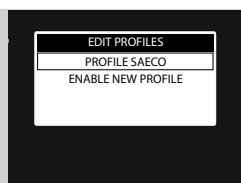

5 This display is shown.

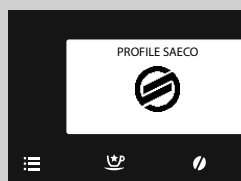

6 Press the “☰” button to exit the programming menu. Now the machine is ready for brewing.

ADJUSTMENTS

The machine allows for certain adjustments so that you can brew the best tasting coffee possible.

Saeco Adapting System

Coffee is a natural product and its characteristics may change according to its origin, blend and roast. The machine is equipped with a self-adjusting system that allows you to use all types of coffee beans available on the market except for caramelized and flavoured coffee beans.

The machine automatically adjusts itself after brewing several cups of coffee to optimize coffee extraction.

Adjusting the Ceramic Coffee Grinder

Ceramic coffee grinders always guarantee accurate and perfect grinding and specific coarseness for every coffee speciality.


This technology provides full aroma preservation, delivering a truly Italian taste in every cup.




Warning:

The ceramic coffee grinder contains moving parts that may be dangerous. Do not insert fingers or other objects. Only adjust the ceramic coffee grinder using the grinder adjustment key.

You can adjust the ceramic grinders to set the coffee grinding to your personal taste.

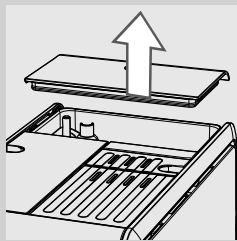

- 1 Remove the coffee bean hopper lid.

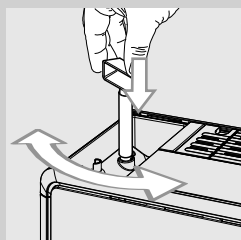

- 2 Press and turn the grinder adjustment knob under the coffee bean hopper **one notch at a time**. Use the coffee grinder adjustment key provided with the machine. You will taste the difference after brewing 2-3 cups of coffee.





Warning:

Do not turn the coffee grinder more than one notch at a time to prevent damage.

Adjusting the Dispensing Spout

The height of the coffee dispensing spout can be adjusted to better fit the dimensions of the cups that you wish to use.


Manually move the coffee dispensing spout up or down using its handle to adjust its height.

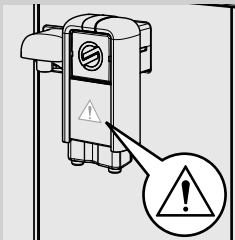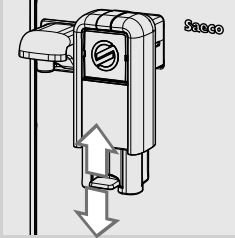


Note:


When removing the dispensing spout to use large containers or for cleaning, make sure to insert it in the right direction during assembly. If you can see this triangle, the dispensing spout was assembled incorrectly.

The recommended positions are:
For the use of small cups.

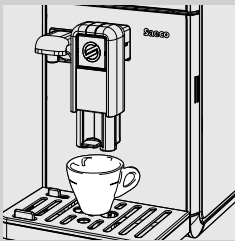

For the use of large cups.

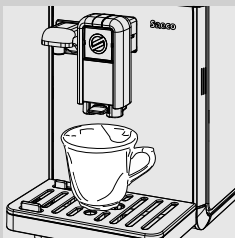

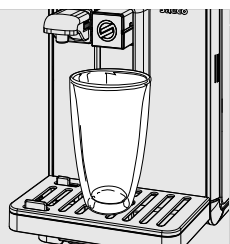


For the use of glasses for Latte Macchiato.



Note:

This is possible by moving the dispensing spout towards the machine.

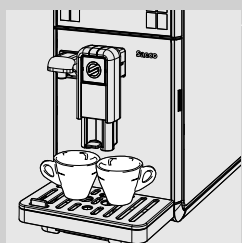


Two cups can be placed under the coffee dispensing spout to brew two coffees at the same time.

Adjusting the Coffee Quantity


The machine allows you to adjust the amount of brewed coffee or milk according to your taste and the size of your cups.

Each time the Espresso “☕”, the Long espresso “☕”, the Caffè Crema “☕” and the American Coffee “☕” buttons are pressed, the machine brews a preset amount of product. Each button may be individually programmed for a specific brew setting.


The following procedure describes the Espresso “☕” button programming.

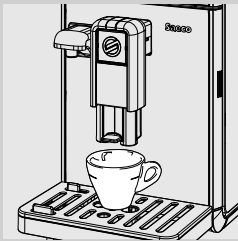

- 1 Place a cup under the coffee dispensing spout.

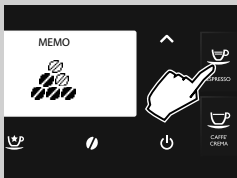

- 2 Press and hold the Espresso “☕” button until the “MEMO” icon appears on the display, then release the button. The machine is now in programming mode. The machine starts brewing coffee.

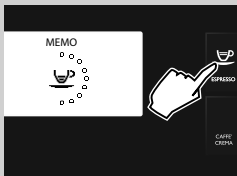

- 3 Press the Espresso “☕” button as soon as the desired amount of coffee is reached.

Now the Espresso “☕” button is programmed; each time it is pressed, the machine will brew the same amount of espresso that was just programmed.



Note:

Follow the same procedure for programming the Long espresso “☕”, Caffè Crema “☕” and American Coffee “☕” buttons.


Once the desired amount is reached, press the selected brew button again to stop brewing.

You can also adjust the beverage length in “**EDIT PROFILES**” (see the “Beverage Programming” chapter, “**COFFEE AMOUNT**” option).

BREWING COFFEE

Before brewing coffee, make sure that there are no warnings shown on the display and that the water tank and the coffee bean hopper are filled.

Brewing Coffee Using Coffee Beans

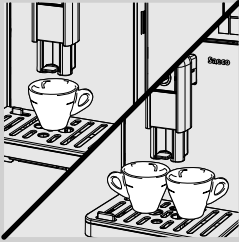

- 1 Place 1 or 2 cups under the coffee dispensing spout.



- 2 Press the “☕” button for an Espresso, the “☕” button for a Long espresso, the “☕” button for a Caffè crema or the “☕” button for an American Coffee.




- 3 To brew 1 cup of coffee, press the desired button once. This display is shown.



- 4 To brew 2 cups of coffee, press the desired button twice consecutively. This display is shown.

Note:


In this operating mode, the machine automatically grinds and doses the proper amount of coffee.

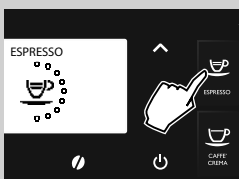

- 5 After the prebrewing cycle, coffee begins to pour out of the coffee dispensing spout.
- 6 Coffee brewing automatically stops when the preset level is reached; you can stop it earlier by pressing the same button that you pressed to start brewing.

Brewing Coffee Using Pre-Ground Coffee


This function allows you to use pre-ground and decaffeinated coffee. With the pre-ground coffee function you can only brew one coffee at a time.

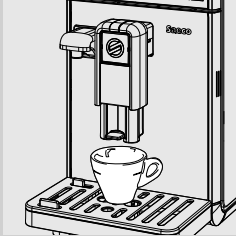

- 1 Place a cup under the coffee dispensing spout.




- 2 Press the “☉” button to access the aroma selection menu.

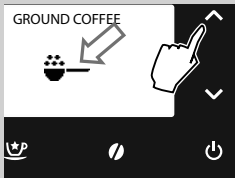


- 3 To select the pre-ground coffee brewing function, press the “∨” or “∧” scrolling button until the “☉” icon is displayed.



- 4 Press the “☉” button for an Espresso, the “☉” button for a Long espresso or the “☉” button for a Caffè crema.

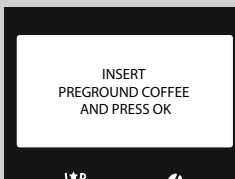

- 5 When choosing the product, the machine asks you to confirm that ground coffee has been inserted.

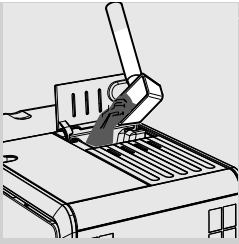


6 Open the pre-ground coffee compartment lid.

7 Add one measuring scoop of pre-ground coffee into the compartment. Use only the measuring scoop supplied with the machine. Then close the pre-ground coffee compartment lid.



Warning:

Add only pre-ground coffee into the pre-ground coffee compartment. Other substances and objects may cause severe damage to the machine. This repair is not covered by your warranty!

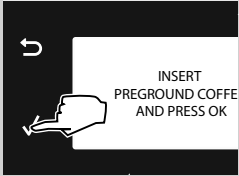

8 Press the “✓” button. After the prebrewing cycle, coffee begins to pour out of the coffee dispensing spout.



9 Coffee brewing automatically stops when the preset level is reached; however, you can stop it earlier by pressing the same button of the selected beverage.



After brewing, the machine returns to the main menu.

Repeat the steps described above to brew more cups of coffee using pre-ground coffee.



Note:

If no pre-ground coffee is poured into the compartment, only water will be dispensed.


If the dose is excessive or if 2 or more measuring scoops have been added, the machine will discharge the excess pre-ground coffee into the coffee grounds drawer. The brewing length cannot be saved for pre-ground coffee.



Note:

This function remains active for 30 seconds. Then the machine resets the selection and goes back to the earlier status.

MILK CARAFE

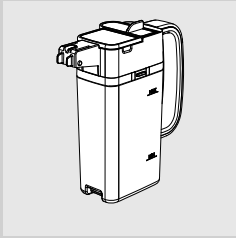

This chapter explains how to use the milk carafe to prepare milk-based beverages.



Note:

Before using the milk carafe, clean it thoroughly as described in the “Cleaning and Maintenance” chapter.

We recommend filling it with cold milk (approx. 5°C).




Warning:

Fill the carafe with milk for beverages and with water for cleaning only.


Filling the Milk Carafe

The milk carafe can be filled before or during use.

- 1 Lift the carafe lid as shown in the figure.

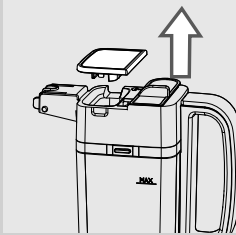


- 2 Pour milk into the carafe: the milk level must be between the minimum (MIN) and maximum (MAX) level indicators shown on the milk carafe. Put the carafe lid back on.

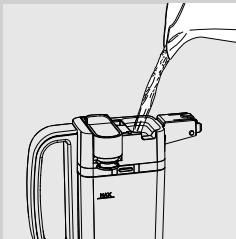


- 3 The milk carafe is now ready for use.


Inserting the Milk Carafe

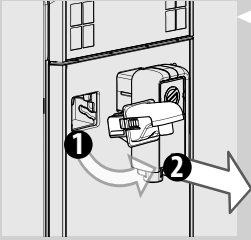

- 1 If installed, remove the water dispensing spout as shown in the figure:
 - Press the two side buttons to unlock the dispensing spout and lift it slightly.
 - Pull the hot water dispensing spout to remove it.

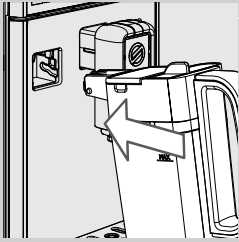


- 2 Slightly tilt the milk carafe. Insert it all the way into the guides of the machine.

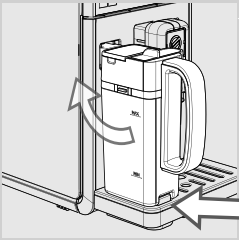



- 3 Push the carafe towards the bottom while rotating it at the same time until it is locked onto the drip tray.
Do not force the carafe while inserting it.

Removing the Milk Carafe

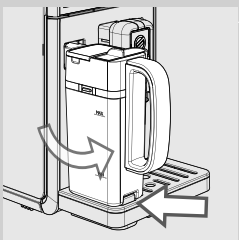


- 1 Rotate the carafe upwards until it is released from the insert in the drip tray. Then remove it.

Emptying the Milk Carafe

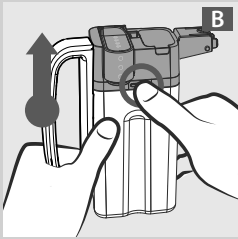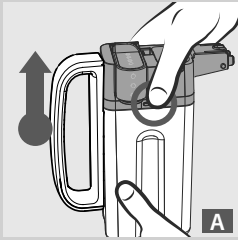

1 Press one of the release buttons to remove the top of the carafe as shown in the figures (A or B).

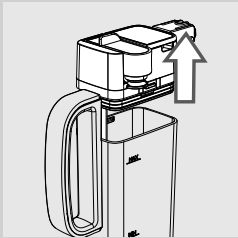

2 Lift the top of the carafe. Empty the milk carafe and clean it properly.



Note:

After each use, clean the milk carafe as described in the “Cleaning and Maintenance” chapter.


DISPENSING MILK-BASED BEVERAGES

**Warning:**

Danger of burning! Dispensing may be preceded by jets of milk and steam. Wait until the end of the cycle before removing the milk carafe.

The buttons to automatically prepare an Espresso Macchiato “☕”, a Cappuccino “☕”, a Latte Macchiato “☕” and a Frothed Milk “☕” are displayed on the control panel.


The procedure for brewing a Cappuccino “☕” is shown as an example.

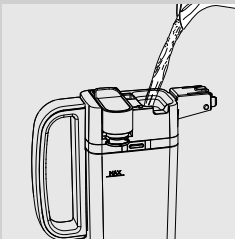


- 1 Fill the carafe with milk. The milk level must be between the minimum (MIN) and maximum (MAX) level indicators shown on the carafe. Put the carafe lid back on.

**Note:**


Use cold (~5 °C / 41°F) milk with a protein content of at least 3% to ensure optimum results when preparing a cappuccino. Whole milk or skimmed milk may be used depending on individual taste.

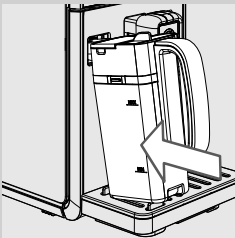

- 2 Insert the carafe into the machine.

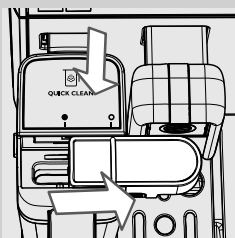


- 3 Pull out the carafe dispensing spout to the right up to the “☕” icon. Make sure that the dispensing spout handle is perfectly aligned to the “☕” icon.

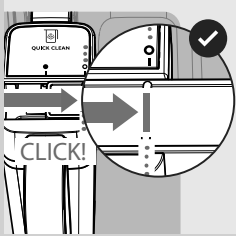

4 When the carafe dispensing spout is correctly positioned you will hear a CLICK!

Note:

If the carafe dispensing spout has not been pulled all the way out, steam may escape and milk may not be properly frothed.

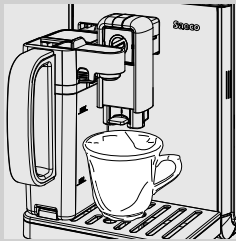


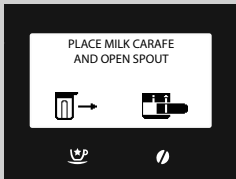
5 Place a cup under the carafe dispensing spout.




6 Press the Cappuccino “” button to start dispensing.

Note:

When dispensing milk-based beverages, you can completely stop the dispensing cycle by pressing the ESC “” button.




7 The machine reminds you to insert the carafe and to remove the carafe dispensing spout.

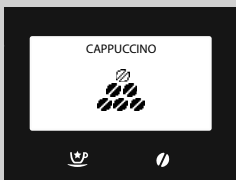


8 The machine grinds the predefined amount of coffee.




9 This screen is displayed during the preheating time required by the machine.

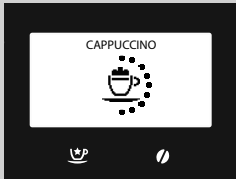

10 The machine starts dispensing milk. To stop dispensing, press the same selected beverage button that you pressed previously. Dispensing will stop in a few seconds.

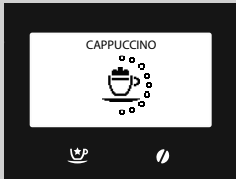

11 Once frothed milk has been dispensed, the machine brews coffee. To stop brewing, press the same selected beverage button that you pressed previously.

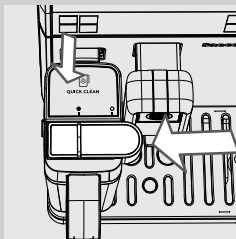

12 After brewing, press the "↶" button if you do not wish to perform a carafe automatic rinse cycle.



Note:

After using the milk carafe, clean it as described in the "Cleaning and Maintenance" chapter.




Note:

Follow the same steps to prepare an Espresso Macchiato "☕", a Latte Macchiato "☕" or a Frothed Milk "☕". When you reach step 5, press the desired product button.

Quick Carafe AUTO CLEAN Cycle

After one or more milk-based products have been dispensed, the machine allows for a quick cleaning of the carafe ducts.

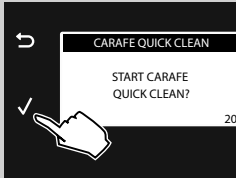


- 1 This screen is displayed for 20 seconds. Press the "✓" button to start the cycle.




Note:

If you wish to prepare another milk-based beverage or do not wish to perform the rinse cycle, press the "↶" button.

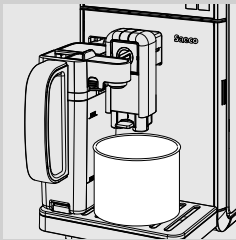


- 2 Pull out the carafe dispensing spout to the right up to the "●" icon. Place a container under the carafe dispensing spout.

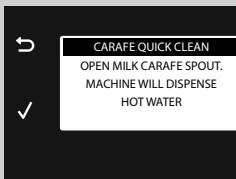

- 3 Press the "✓" button.



- 4 The display shows that the cycle is being performed. Once the cycle has been completed, close the carafe dispensing spout by sliding it to the "●" icon and empty the container.


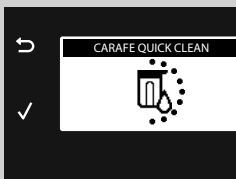


Adjusting Milk-Based Product Length


Every time the Espresso Macchiato “☕️”, the Cappuccino “☕️”, the Latte Macchiato “☕️” and the Frothed Milk “☕️” buttons are pressed, the machine brews a preset amount of selected beverage into the cup. The machine allows you to adjust the amount of each beverage according to your taste and the size of your cups.

The procedure for programming a Cappuccino “☕️” is shown as an example.


- 1 Fill the carafe with milk and place it into the machine.
- 2 Pull out the carafe dispensing spout to the right up to the “⦿” icon. Place a cup under the carafe dispensing spout.

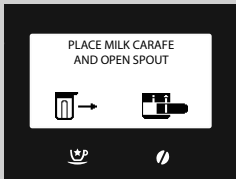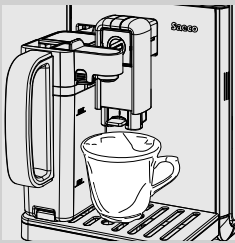


- 3 Press and hold the Cappuccino “☕️” button until this display is shown, then release the button. The machine reminds you to insert the carafe and to remove the carafe dispensing spout. The machine is now in programming mode.

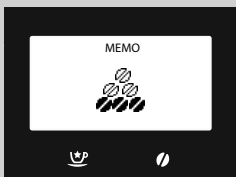

- 4 The machine grinds the predefined amount of coffee.

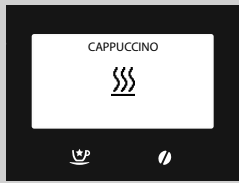

- 5 This icon is displayed during the preheating time required by the machine.

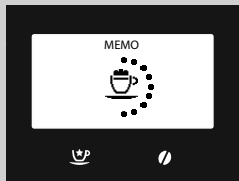

- 6 When this icon is shown, the machine starts dispensing frothed milk into the cup. Once the desired amount of frothed milk is reached, press the same selected beverage button that you pressed previously. Dispensing will stop in a few seconds.




Note:

If you are dispensing Frothed Milk “

 The image shows the machine's control panel. The display screen displays the word 'CAPPUCCINO' at the top and a coffee cup icon with steam rising from it in the center. Below the screen are two buttons: a smiley face icon and a circle with a diagonal line.

- 7 Once frothed milk has been dispensed, the machine starts brewing coffee. When the desired quantity is reached, press the same selected beverage button that you pressed previously.

Now the Cappuccino “

 A small icon consisting of three horizontal lines, used to denote a note.

Note:

Follow the same steps to prepare an Espresso Macchiato “

SPECIAL BEVERAGES

The machine is designed to brew more products than those described so far. For this, follow the steps below:



- 1 Press the “☺” button to access the “SPECIAL BEVERAGES” menu.



- 2 Select the beverage by pressing the “▼” button or the “▲” button. Then press the “✓” button to start dispensing.

- 3 To stop beverage dispensing, press the Special Beverages “☺” button again or press the “↶” button.



Note:

If you press the Special Beverages “☺” button without choosing any product, the machine returns to the main menu after 3 minutes.


The special beverages function allows you to only dispense one beverage at a time. To dispense more beverages, repeat the procedure.

Hot Water




Warning:


Danger of burning! Dispensing may be preceded by small jets of hot water and steam. Wait until the end of the cycle before removing the water dispensing spout.

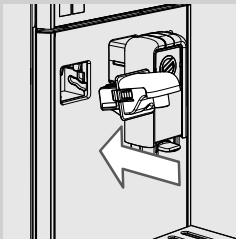


- 1 Remove the milk carafe, if inserted. Slightly tilt the water dispensing spout and insert it all the way into the guides of the machine.

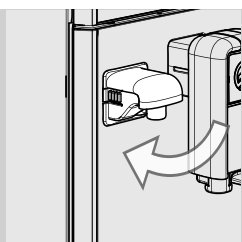

2 Push the water dispensing spout towards the bottom while rotating it at the same time until it is locked into the machine as shown in the figure.

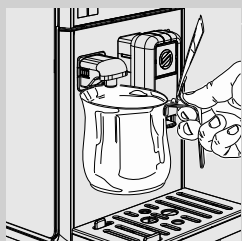


3 Place a container under the hot water dispensing spout.

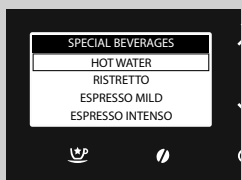

4 Press the “☺” button to access the “**SPECIAL BEVERAGES**” menu.

5 Press the “✓” button to start dispensing.

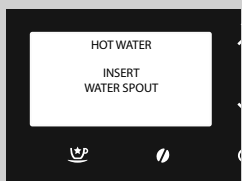

6 This icon is displayed. The machine reminds you to install the water dispensing spout. Check that the water dispensing spout is correctly installed. Press “✓” to confirm. The machine starts dispensing hot water.



7 This icon is displayed during the preheating time required by the machine.



8 Dispense the desired amount of hot water. Press the “↶” button to stop dispensing hot water.

Adjusting Hot Water Dispensing




Warning:

Danger of burning! Dispensing may be preceded by small jets of hot water and steam. Wait until the end of the cycle before removing the water dispensing spout.

1 Make sure that the machine is ready for hot water dispensing.




2 Press the “☑” button to access the “SPECIAL BEVERAGES” menu.

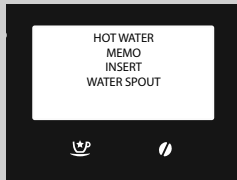


3 Keep the “☑” button pressed for more than 3 seconds until this screen is displayed.

4 Then press the “☑” button again to confirm.

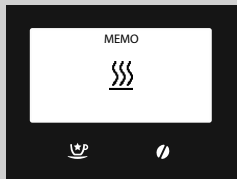

5 This icon is displayed during the preheating time required by the machine.

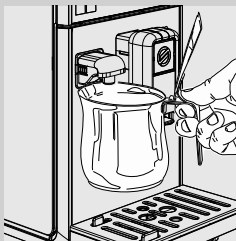

6 Dispense the desired amount of hot water.

To stop hot water dispensing, press the Special Beverages “☑” button again.

The amount of water to be dispensed is now programmed. Every time it is selected, the machine will dispense the same amount of hot water that was programmed.

Special Beverages Menu for Dispensing Other Beverages


The menu allows you to dispense other beverages according to your personal taste.

The procedure for brewing a strong coffee is shown as an example.



Note:

Follow the same steps to dispense the other beverages of the menu. Only when you are dispensing a "Flat white" you need to prepare the machine as for brewing a Cappuccino.

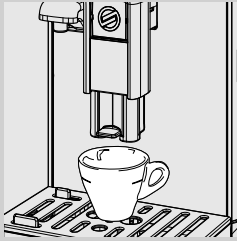

- 1 Place 1 cup under the coffee dispensing spout.



- 2 Press the "☰" button to access the "SPECIAL BEVERAGES" menu.
- 3 Select the beverage by pressing the "▼" button until you reach the "RISTRETTO" option.
- 4 Press the "✓" button to start brewing.
- 5 Coffee brewing automatically stops when the preset level is reached. However, you can stop it earlier by pressing press the "Special Beverages" "☰" button again.

Adjusting the Quantity of the Other Beverages for the “Special Beverages” Menu


This procedure allows you to adjust the quantity of the other beverages displayed on the menu according to personal taste.

The procedure for brewing a strong coffee is shown as an example.



Note:

Follow the same steps to dispense the other beverages of the menu. Only when you are dispensing a “Flat white” you need to prepare the machine as for brewing a Cappuccino.

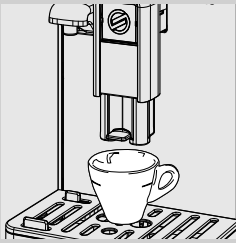


- 1 Place 1 cup under the coffee dispensing spout.



- 2 Press the “☰” button to access the “SPECIAL BEVERAGES” menu.

- 3 Select the beverage by pressing the “▼” button until you reach the “RISTRETTO” option.

- 4 Press and hold the “✓” button until the “MEMO” icon appears on the display, then release the button. The machine is now in programming mode.
The machine starts brewing coffee.

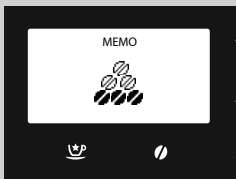

- 5 Press the “☰” button as soon as the desired amount of coffee is reached.

Now the beverage is programmed; each time it is selected, the machine will dispense the same amount that was just programmed.



Note:


Only when you are brewing a “FLAT WHITE” you need to program the amount of milk and coffee separately, as shown for brewing a Cappuccino.

BEVERAGE PROGRAMMING


The machine allows you to customize every beverage according to your personal taste and to save the preferences in your personal profile.




1 Press the "☰" button to access the machine main menu.

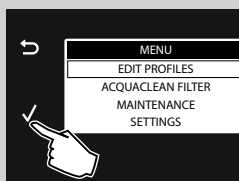

2 Press "✓" to confirm.

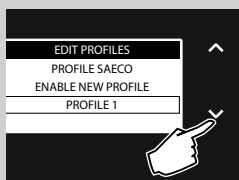

3 Press the "✓" button to select the enabled profile in which you wish to program the beverage.

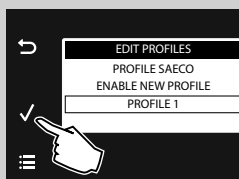


4 Press "✓" to confirm.




Note:

The parameters to be adjusted for brewing a cappuccino are shown as an example. Follow the same steps to adjust the other beverages. The milk parameters are not available for the coffee-only beverages.

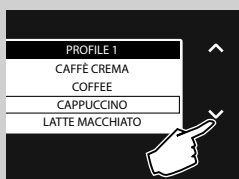

5 Press the "✓" button to select "CAPPUCCINO".

6 Press "✓" to confirm.

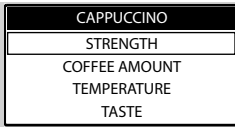

The parameters to be adjusted are displayed.
 To select them, press the "▼" or "▲" scrolling button.
 To access, press the "✓" button.
 To go back to the previous screen, press the "↶" button.
 To go back to the main screen, press the "☰" button.

Strength



This setting adjusts the amount of coffee to be ground.

- = very mild aroma
- = mild aroma
- = regular aroma
- = strong aroma
- = very strong aroma
- = extra strong aroma
- ☕ = ground coffee


Press the "▼" or "▲" scrolling button to make a selection, then press the "✓" button to confirm.

Coffee Amount



By adjusting the bar on the display with the "▼" or "▲" scrolling button, you can choose the amount of water used for coffee brewing.
 Press "✓" to confirm the adjustment.

Temperature

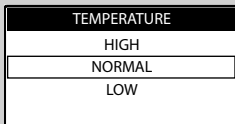

This setting allows you to adjust the coffee temperature.
HIGH: high temperature.
NORMAL: medium temperature.
LOW: low temperature.

Press the "▼" or "▲" scrolling button to make a selection, then press the "✓" button to confirm.






Taste

This setting enables the prebrewing function. During prebrewing, the coffee is slightly dampened to bring out the aroma in full.

DELICATE: the prebrewing function is not performed.




BALANCED: the prebrewing function is enabled.

FULL BODY: the prebrewing function lasts longer to enhance the coffee taste.

Press the “” or “” scrolling button to make a selection, then press the “” button to confirm.



Milk Amount

By adjusting the bar on the display with the “” or “” scrolling button, you can choose the amount of milk to be used for the selected beverage. Press “” to confirm the adjustment.




Note:


The milk adjusting options are displayed only for the milk-based beverages.

HOT WATER PROGRAMMING


The following procedure describes how to program hot water.






1 Press the “” button to select “**HOT WATER**”.

2 Press “” to confirm.

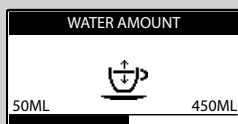Water Amount



By adjusting the bar on the display with the “” or “” scrolling button, you can choose the quantity of water to be dispensed. Press “” to confirm the adjustment.

RESTORING BEVERAGE PARAMETERS


The factory settings of every beverage can be restored for each profile.

- 1 Press the "✓" button to select "RESTORE TO DEFAULT".
- 2 Press "✓" twice to confirm. All the parameters are restored to factory settings.



Note:

Through this option, all the customized settings programmed by the user are deleted.

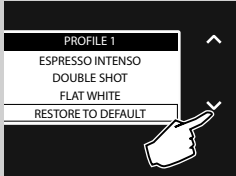

The factory settings of every beverage can be restored for each parameter.

- 1 When the desired beverage has been selected, press the "✓" button to select "RESTORE TO DEFAULT".
- 2 Press "✓" twice to confirm. All the parameters are restored to factory settings.



Note:

Through this option, all the customized settings programmed by the user for the selected product are deleted.



Note:


Press the "☰" button to exit.

MACHINE PROGRAMMING


The machine allows you to customize the operating settings. These settings are applied to all user profiles.




1 Press the "☰" button to access the machine main menu.

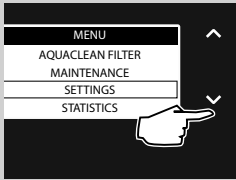

2 Press the "▼" button to select "SETTINGS".

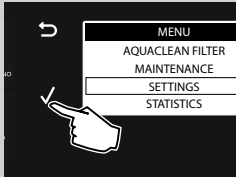


3 Press "✓" to confirm.

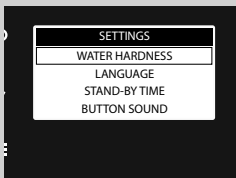


The parameters to be adjusted are displayed here.
 To select them, press the "▼" or "▲" scrolling button.
 To access, press the "✓" button.
 To go back to the previous screen, press the "↶" button.
 To go back to the main screen, press the "☰" button.

Water Settings

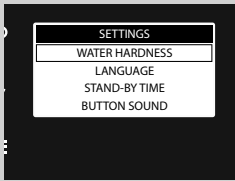


The **WATER SETTINGS** option allows you to adjust the water parameters for an optimal coffee.

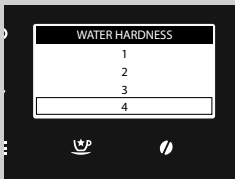


Under **WATER HARDNESS** you can set the water hardness level. For water hardness measuring, refer to the “Measuring and Programming Water Hardness” chapter.

Language Settings

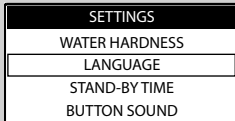

This setting is important to automatically adjust the machine parameters according to the user's country.


Stand-by Settings

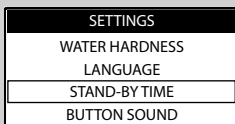

The **STAND-BY** sets the time lapse for the machine to go into stand-by mode after the last brewing. The stand-by time ranges from 15, 30, 60 and 180 minutes.

The default time value is 15 minutes.

Button Sound

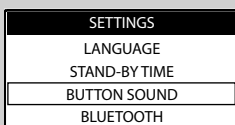


This setting allows the machine to produce a sound each time a button is pressed.


OFF: Tone deactivated

ON: Tone activated

Bluetooth Connection (only for HD8969, HD8977 and HD8978)

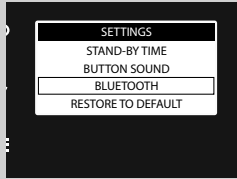


The **BLUETOOTH** menu allows you to connect the machine to a mobile device compatible with this technology.

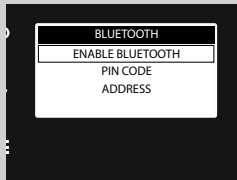


Under **ENABLE BLUETOOTH** you can find the options to activate the function.

OFF: Bluetooth deactivated (the machine cannot connect to mobile devices).

ON: Bluetooth activated (the machine can connect to mobile devices).

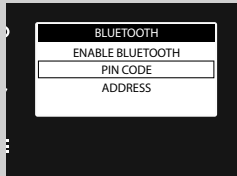


Under **PIN CODE** you can find the code that you are prompted to enter when connecting to mobile devices.

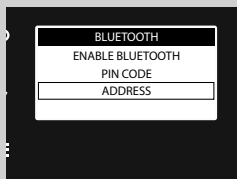

Under **ADDRESS** you can find the ID number of the Bluetooth module on the machine.

Factory Settings

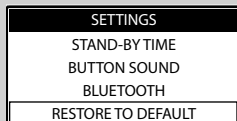


Activating the **RESTORE TO DEFAULT** option will restore all machine settings to their default values. In this case, all customized parameters will be deleted.

STATISTICS

The machine allows you to see how many beverages have been brewed. This allows you to schedule the various maintenance operations indicated in the instruction manual.



- 1 Press the "☰" button to access the machine main menu.

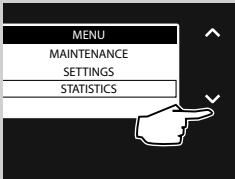

- 2 Press the "✓" button to select "STATISTICS".
- 3 Press "✓" to confirm.


The amount of brewed beverages, divided for each option, will be displayed.

MAINTENANCE

In this menu you can manage all the automatic cycles necessary for the correct maintenance of the machine.



- 1 Press the "☰" button to access the machine main menu.

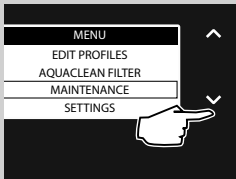

- 2 Press the "▼" button to select "MAINTENANCE".




- 3 Press "✓" to confirm.

- 4 Press the "▼" or "▲" button to select the cycle to be activated.

The various cycles to be activated are displayed here.

Descaling

The **DESCALING** function activates the descaling cycle (see the "Descaling" chapter).

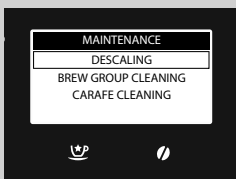


Brew Group Cleaning Cycle




The **BREW GROUP CLEANING** function allows you to carry out the brew group monthly cleaning (see the “Monthly Cleaning of the Brew Group with Coffee Oil Remover” chapter).

Carafe Cleaning

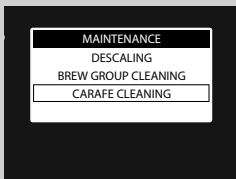


The **CARAFE CLEANING** menu allows you to manage the carafe cleaning.

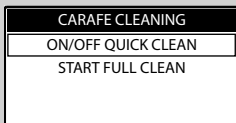

Under **ON/OFF QUICK CLEAN** you can find the options to manage the “**Quick Rinse Cycle**” displayed after dispensing a milk-based beverage.

OFF: Cycle deactivated.

ON: Cycle activated.

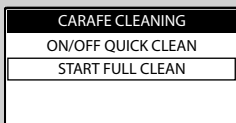

In **START FULL CLEAN** you can start the milk carafe cleaning (see the “Monthly Cleaning of the Milk Carafe” chapter).

CLEANING AND MAINTENANCE

Daily Cleaning of the Machine



Caution:

Timely cleaning and maintenance of your machine is very important as it prolongs the life of your machine. The machine is continuously exposed to humidity, coffee and limescale!


The activities you need to perform and their frequency are described in detail in this chapter. Not doing this will ultimately make your machine stop working properly. This repair is NOT covered by warranty!




Note:

- Use a soft, dampened cloth to clean the machine.
- Only the cup holder grill, the internal drip tray, the coffee grounds drawer and any parts of the carafe described in the "Weekly Cleaning of the Milk Carafe" section can be washed in the dishwasher. Any other components must be washed with lukewarm water.
- Do not immerse the machine in water.
- Do not use alcohol, solvents and/or abrasive objects to clean the machine.
- Do not dry the machine and/or its components using a microwave and/or standard oven.


Empty and clean the coffee grounds drawer and the (internal) drip tray every day with the machine turned on. Please follow the steps below:

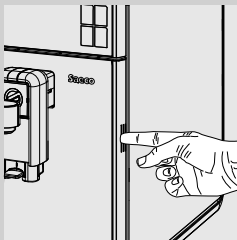


- 1** Press the button in the frame and open the service door.

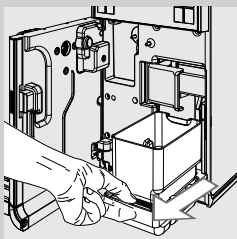


- 2** Remove the (internal) drip tray and coffee grounds drawer.

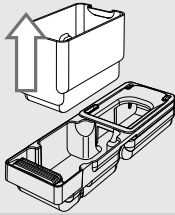


3 Empty the coffee grounds drawer and wash it with fresh water.

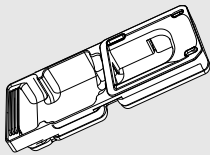


4 Empty the (internal) drip tray and the lid and wash them with fresh water.

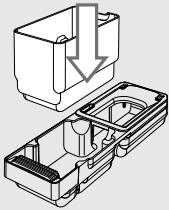


5 Correctly reinstall all the components.

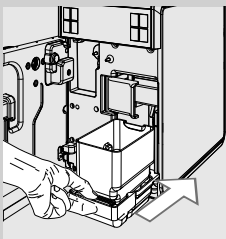

6 Insert the drip tray and the coffee grounds drawer and close the service door.

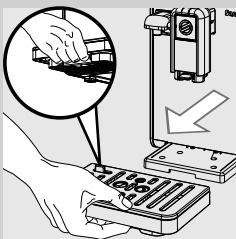


7 Press the lever on the bottom, remove the drip tray (external), empty it and wash it.

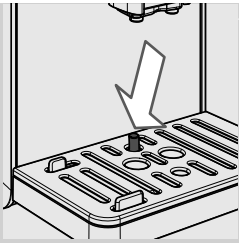**Note:**

Perform this operation also when the full drip tray indicator is raised.



Daily Cleaning of the Water Tank

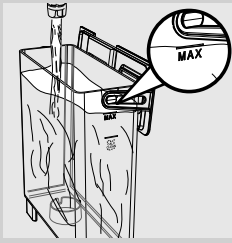


- 1** Remove the small white filter or the AQUACLEAN water filter (if installed) from the water tank and wash both with fresh water.
- 2** Put the small white filter or the AQUACLEAN water filter (if installed) back in its housing by gently pressing and turning it at the same time.
- 3** Fill the water tank with fresh water.

Daily Cleaning of the Milk Carafe


In addition to the quick carafe rinse cycle, we recommend that you also clean the carafe daily as described below. This preserves hygiene and ensures a perfect frothed milk consistency.

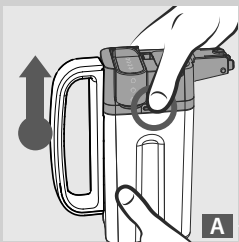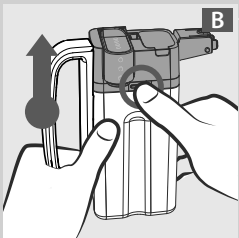**A****B**


- 1** Press one of the release buttons to remove the top of the carafe as shown in the figures (A or B).

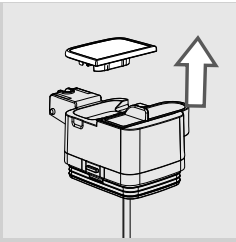


2 Remove the lid.

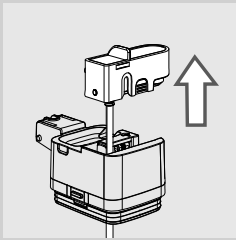


3 Lift the carafe dispensing spout to remove it from the top of the carafe.

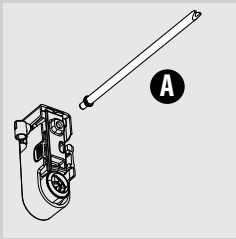



4 Remove the suction tube with the fitting (A) from the milk frother.

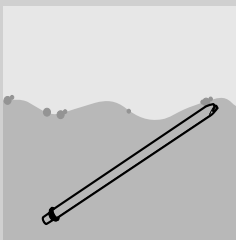

5 Wash the suction tube with the fitting thoroughly with fresh water.

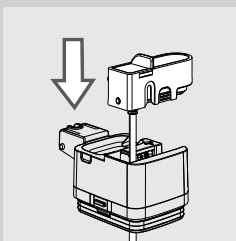


6 After installing the suction tube with the fitting, insert the carafe dispensing spout on the top of the carafe.

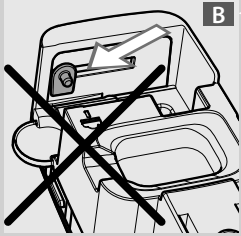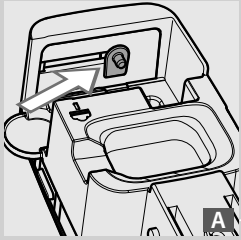


Note:

If you cannot install the dispensing spout on the top of the carafe, the pin is in the wrong position (B). Before installing the dispensing spout, manually push the pin to the (A) position.

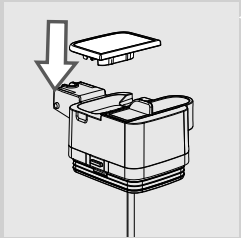


7 Insert the lid.

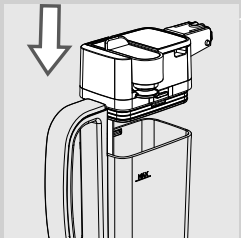

8 Place the top of the carafe back in position.


Weekly Cleaning of the Milk Carafe

The weekly cleaning is more thorough since all milk residues are removed from the dispensing spout.

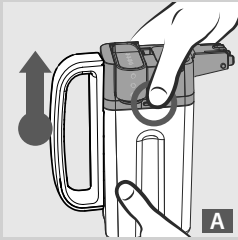


A

- 1 Press one of the release buttons to remove the top of the carafe as shown in the figures (A or B).

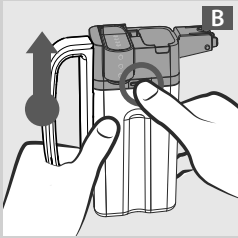


B


- 2 Remove the lid.

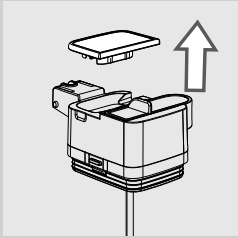


- 3 Lift the carafe dispensing spout to remove it from the top of the carafe. The carafe dispensing spout is made up of six parts that must be disassembled. Each part is indicated by a capital letter (A, B, C, D, E, F).

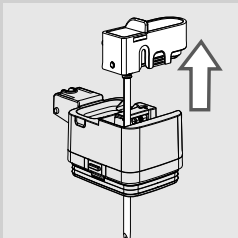


- 4 Remove the suction tube with the fitting (A) from the milk frother.

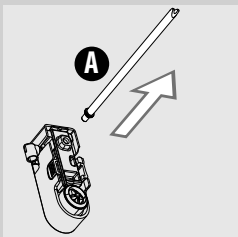


A

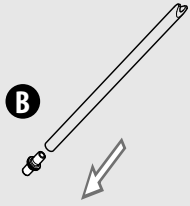


5 Remove the fitting (B) from the suction tube.

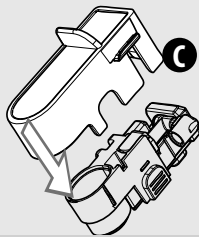


6 Detach the lid (C) from the milk carafe dispensing spout by slightly pressing on the sides while pushing downwards.

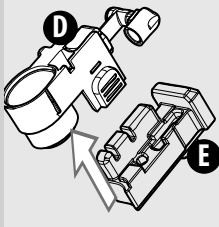

7 Remove the milk frothing device (D) from the support (E).

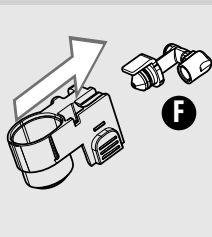

8 Remove the fitting (F) from the milk frothing device by pulling it outwards.

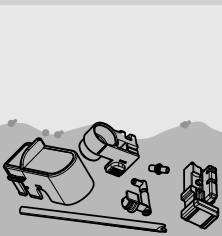


9 Clean all the parts thoroughly with lukewarm water.




Note:


You can also clean these parts in the dishwasher.

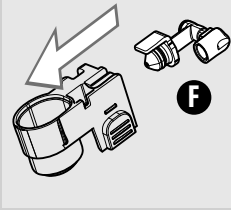


10 Insert the fitting (F) into the milk frothing device by pressing it up to its limit.

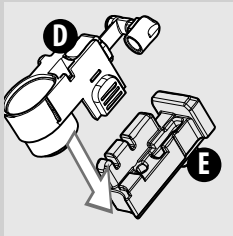


11 Insert the milk frothing device (D) into the support (E).

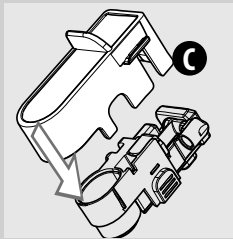


12 Attach the top (C) to the carafe dispensing spout.

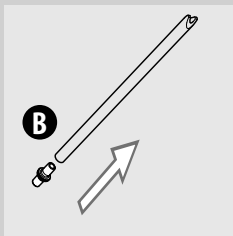



13 Insert the fitting (B) into the suction tube.

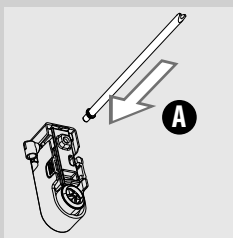

14 Insert the suction tube with the fitting (A) into the milk frother.

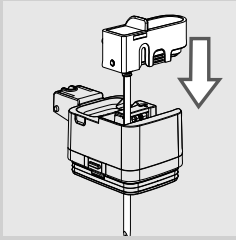


15 Insert the dispensing spout into the top part of the carafe.

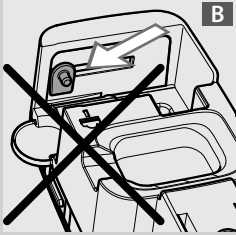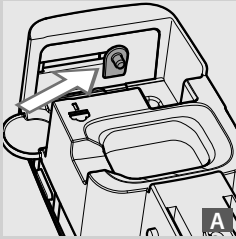


Note:

If you cannot install the dispensing spout on the top of the carafe, the pin is in the wrong position (B). Before installing the dispensing spout, manually push the pin to the (A) position.

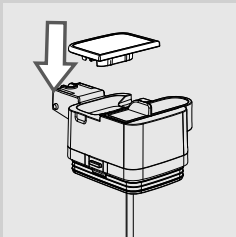

16 Insert the lid.

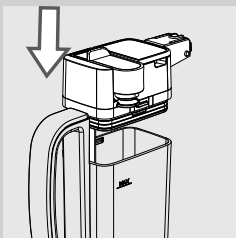


17 Attach the top of the milk carafe, ensuring it is locked into place.


Weekly Cleaning of the Brew Group

The brew group should be cleaned every time the coffee bean hopper is filled or at least once a week.


- 1 Turn off the machine by pressing the "⏻" button and remove the plug from the socket.

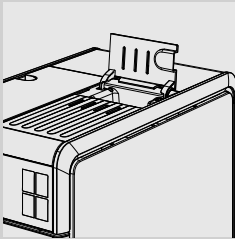


- 2 Open the pre-ground coffee compartment lid.

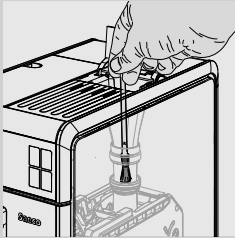


- 3 Thoroughly clean the pre-ground coffee compartment with the cleaning brush, making sure that there are no more coffee residues in the duct.

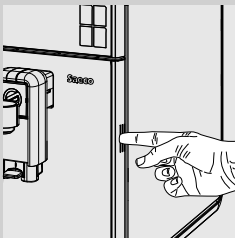


- 4 Press the button in the frame and open the service door.

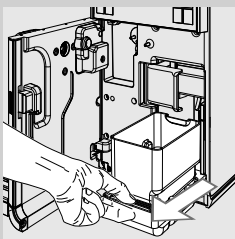


- 5 Remove the drip tray (internal) and coffee grounds drawer and clean them.

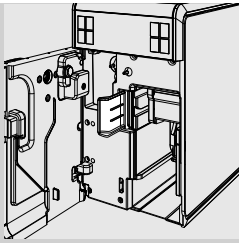


6 Open the brew group unlocking lever.

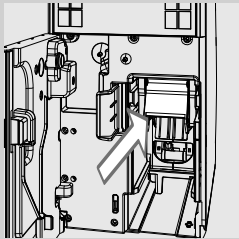

7 Seize the brew group handle and pull it outwards.

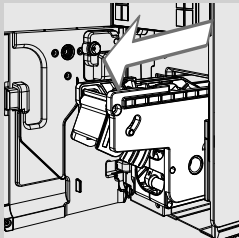

8 While pulling the lever, remove the brew group.

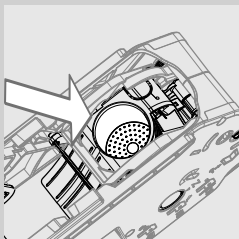

9 Thoroughly wash the brew group with lukewarm water and carefully clean the brew group filter.




Caution:

Do not use detergent or soap to clean the brew group.

10 Let the brew group air-dry thoroughly.

11 Thoroughly clean the inside of the machine using a soft, dampened cloth.

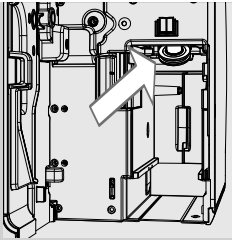


- 12** Thoroughly clean the upper screen using a non-abrasive cloth to remove any coffee grounds.




Warning:


Danger of burning! The upper screen is a hot component. Make sure that the machine has cooled down before cleaning. Perform the operation when the machine has been turned off for at least one hour.

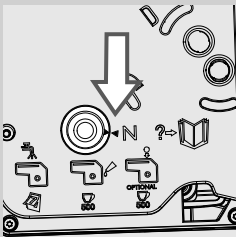


- 13** Make sure that the brew group is in the off position; the two reference marks must match. If they do not match, proceed as described in steps (14 and 15).

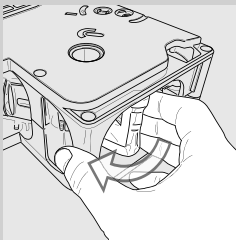


- 14** Turn the brew group back to the off position by manually turning the pin on the base as shown in this figure. Turn it until it locks into the position described in the following step.

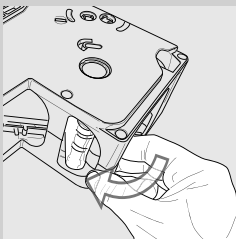


- 15** When you reach the position shown in this figure, check that the two reference marks match and that the brew group is locked into position.

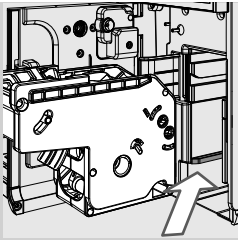


16 Insert the brew group back into its seat by sliding it along the guides until it locks into place.

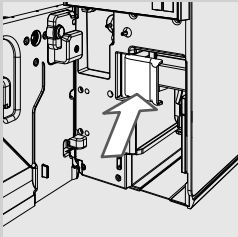

17 Close the brew group locking lever to lock it into position.

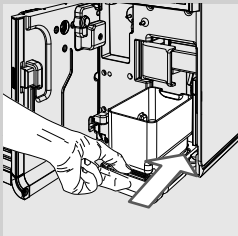

18 Insert the drip tray (internal) and coffee grounds drawer.

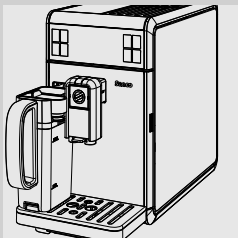

19 Close the service door.

Monthly Cleaning of the Milk Carafe




For the monthly cleaning cycle, we recommend using the “Saeco Milk Circuit Cleaner” to keep the entire circuit clean of milk residues. The “Saeco Milk Circuit Cleaner” can be purchased separately. Please refer to the maintenance products page for further details.




Warning:

Danger of burning! Dispensing may be preceded by small jets of hot water and steam. Danger of burning! Wait until the end of the cycle before removing the milk carafe.

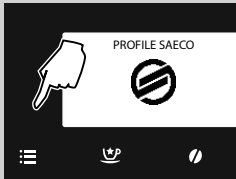

1 Press the “☰” button to access the machine main menu.

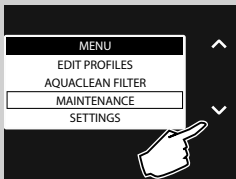


2 Press the “✓” button to select “**MAINTENANCE**”.

3 Press “✓” to confirm.



4 Press the “✓” button to select “**CARAFE CLEANING**”.

5 Press “✓” to confirm.

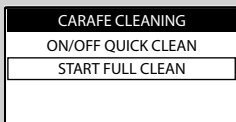

6 Press the “✓” button to select “**START FULL CLEAN**”.

7 Press “✓” to confirm.

START FULL CLEAN
START CARAFE
FULL CLEAN?
(~ 5 MINUTES)



8 Press "✓" to confirm or "↶" to return to the previous menu.

CARAFE CLEANING
REFILL
WATER TANK

9 Fill the water tank with fresh water up to the MAX level. Press the "✓" button to confirm.

CARAFE CLEANING
POUR DETERGENT
INTO CARAFE & FILL
WITH WATER

10 Pour one milk cleaner bag into the milk carafe. Fill the milk carafe with fresh drinking water up to the MAX level and then let the milk cleaner bag dissolve completely.

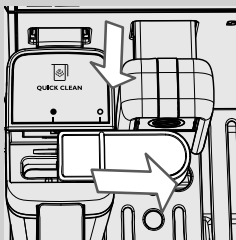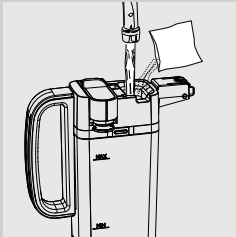


11 Insert the carafe into the machine. Slide the carafe dispensing spout to the right up to the "●" icon. Press the "✓" button to confirm.

CARAFE CLEANING
PLACE MILK CARAFE
AND OPEN SPOUT

12 Press "✓" to confirm.

CARAFE CLEANING

PLACE CONTAINER
UNDER THE CARAFE
DISPENSING SPOUT

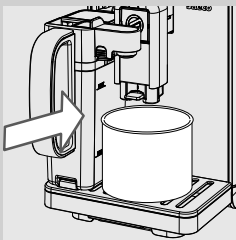

- 13** Place a large container (1.5 l) under the dispensing spout. Press the "✓" button to confirm. The machine starts dispensing the solution through the milk dispensing spout.

CARAFE CLEANING



- 14** The following display shows the cycle progress.



Warning:
Never drink the solution dispensed during this step.

CARAFE RINSING

REFILL
WATER TANK


- 15** When the machine stops dispensing, fill the tank with fresh water up to the MAX level. Press the "✓" button to confirm.

CARAFE RINSING


FILL CARAFE WITH
FRESH WATER

- 16** Remove the milk carafe and the container from the machine.

- 17** Rinse thoroughly the milk carafe and fill it with fresh drinking water up to the MAX level. Insert the milk carafe into the machine. Press the "✓" button to confirm.

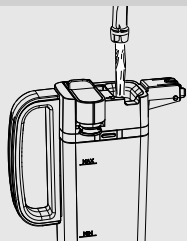

CARAFE RINSING
PLACE MILK CARAFE
AND OPEN SPOUT

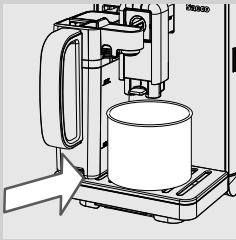

18 Empty the container and place it back under the coffee dispensing spout. Press the “✓” button to confirm.

CARAFE RINSING
PLACE CONTAINER
UNDER THE CARAFE
DISPENSING SPOUT

19 Press “✓” to confirm.

CARAFE RINSING


20 The machine will start dispensing water from the milk dispensing spout. This display is shown.

21 At the end of the cycle, the machine is ready to brew products.

22 Disassemble and wash the milk carafe as described in the “Weekly Cleaning of the Milk Carafe” chapter.

Monthly Lubrication of the Brew Group




Lubricate the brew group after approximately 500 cups of coffee or once a month.

You can purchase the Saeco grease to lubricate the brew group separately. For further details, please refer to the maintenance products page in this user manual.




Caution:



Before lubricating the brew group, clean it with fresh water and let it dry as described in the “Weekly Cleaning of the Brew Group” chapter.


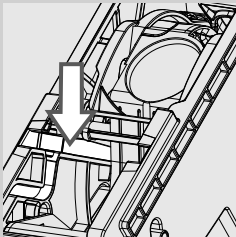


- 1 Apply the lubricant evenly on both side guides.

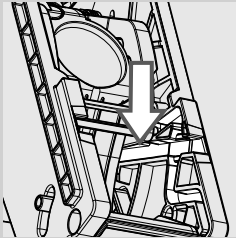

- 2 Lubricate also the piston, as shown in the figure.

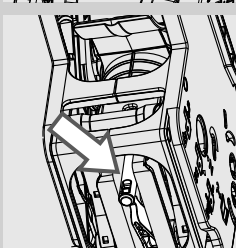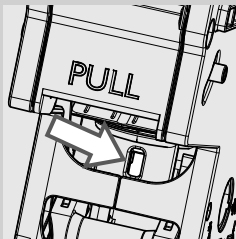

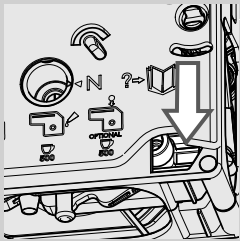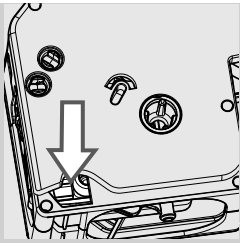

- 3** Lubricate the internal guides positioned on both sides of the brew group.
- 4** Insert the brew group into its seat until it locks into place (see the “Weekly Cleaning of the Brew Group” chapter).
- 5** Insert the (internal) drip tray and the coffee grounds drawer and close the service door.

Monthly Cleaning of the Brew Group with “Coffee Oil Remover”




Besides weekly cleaning, we recommend performing a cleaning cycle with “Coffee Oil Remover” after approximately 500 cups of coffee or once a month. This operation completes the maintenance process for the brew group.


You can purchase the “Coffee Oil Remover” and the “Maintenance Kit” separately. Please refer to the maintenance products page for further details.

! Caution:

The “Coffee Oil Remover” tablets are to be used for cleaning only and do not have a descaling function. For descaling, use the Saeco descaling solution and follow the procedure described in the “Descaling” chapter.

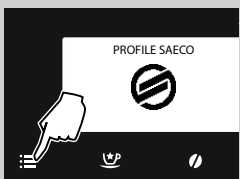


- 1** Press the “☰” button to access the machine main menu.

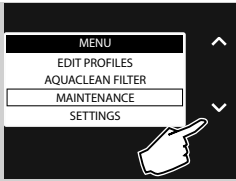


2 Press the "✓" button to select "**MAINTENANCE**".

3 Press "✓" to confirm.

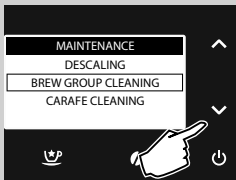


4 Press the "✓" button to select "**BREW GROUP CLEANING**".


5 Press "✓" to confirm.

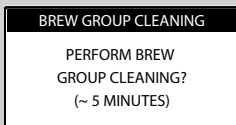


6 Press "✓" to confirm or "↶" to return to the previous menu.

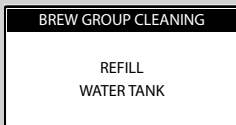

7 Fill the water tank with fresh water up to the MAX level. Press the "✓" button.

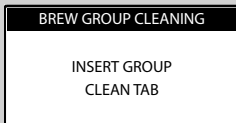


8 Put a "Coffee Oil Remover" tablet in the pre-ground coffee compartment. Press the "✓" button.

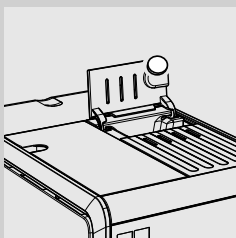

BREW GROUP CLEANING

PLACE A CONTAINER
UNDER THE
DISPENSING SPOUT

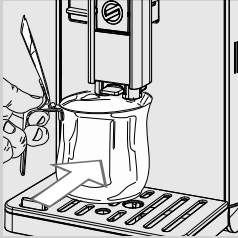

- 9** Place a container (1.5 l) under the coffee dispensing spout. Press the “✓” button to start the cleaning cycle.



Warning:
Never drink the solution dispensed during this step.

BREW GROUP CLEANING



- 10** This icon is displayed. The display shows the cycle progress.




- 11** When the machine stops dispensing, remove and empty the container.

- 12** Clean the brew group as described in the “Weekly Cleaning of the Brew Group” chapter.

DESCALING

When the "☼☼☼" icon is displayed, you need to descale the machine. The descaling cycle takes approx. 30 minutes.

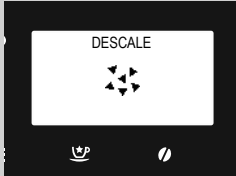

! Caution:
Not doing this will ultimately make your machine stop working properly. In this case, repair is NOT covered by warranty.

! Warning:
Use the Saeco descaling solution only. Its formula has been designed to ensure better machine performance. The use of other products may damage the machine and leave residues in the water.

The Saeco descaling solution can be purchased separately. For further details, please refer to the maintenance products page in this user manual.




! Warning:
Never drink the descaling solution or any products dispensed until the cycle has been carried out to the end. Never use vinegar as a descaling solution.

☰ Note:
 Do not remove the brew group during the descaling process.


To perform the descaling cycle, follow the steps below.

1 Press the "☰" button to access the machine main menu.

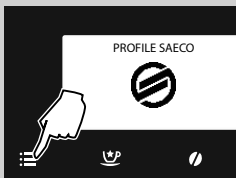

2 Press the "✓" button to select "MAINTENANCE".

3 Press "✓" to confirm.

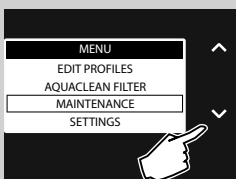




4 Press "✓" to confirm the "DESCALING" selection.




Note:

If the "✓" button is pressed by mistake, press the "↶" button to quit.

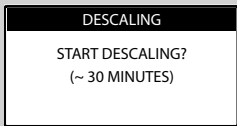

5 Press the "✓" button to confirm.

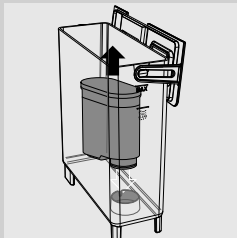

6 Remove the water tank and empty it. Remove the AquaClean filter.




7 Press the "✓" button to confirm.



8 Remove the internal and external drip tray and the coffee grounds drawer. Press the "✓" button to confirm.

DESCALING


FILL HALF CARAFE WITH WATER. INSERT IN BREWING POSITION

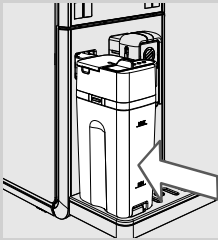

- 9** Fill half the carafe with water and insert it into the machine. Slide the carafe dispensing spout to the right up to the "O" icon. Press the "✓" button to confirm.

DESCALING


PLACE A CONTAINER UNDER THE DISPENSING SPOUT

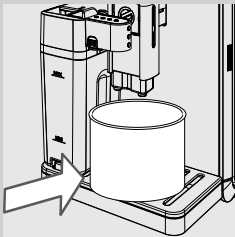


- 10** Place a large container (1.5 l) under both the milk carafe dispensing spout and the coffee dispensing spout. Press the "✓" button to confirm.

DESCALING


POUR DESCALING SOLUTION AND WATER INTO THE TANK UP TO THE CALC-CLEAN LEVEL

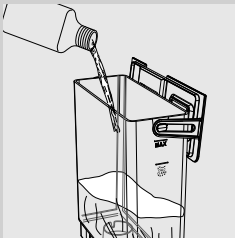

- 11** Pour in the entire content of the Saeco descaling solution.
- 12** Fill the water tank with fresh water up to the CALC CLEAN level. Put the water tank back into the machine. Press the "✓" button to confirm.

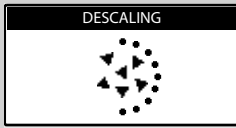


13 The machine starts dispensing the descaling solution at regular intervals. The display shows the cycle progress.

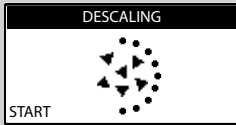

Note:

To empty the container during the process and to pause the descaling cycle, press the “↺” button. To resume the cycle, press the “✓” button.

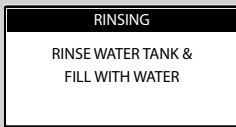

14 The message indicates the end of the first step. The water tank needs to be rinsed. **Fill the water tank with fresh water up to the CALC CLEAN level.** Press the “✓” button.




Note:


The circuit must be cleaned with a preset quantity of water. If the water tank is not filled up to the CALC CLEAN level, the machine may require several refills for rinsing.




15 Empty the (internal) drip tray and place it back. Then press the “✓” button.

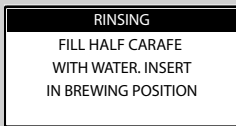

16 Empty the milk carafe and fill half of it with fresh water. Insert it back into the machine with the dispensing spout open. Press the “✓” button.

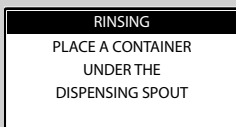

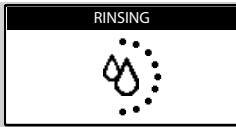

17 Empty the container and place it back under both the milk carafe dispensing spout and the coffee dispensing spout. Press the “✓” button.



18 The rinse cycle starts. The bar shows the progress status of the process.

 **Note:**

To empty the container during the process and to pause the rinse cycle, press the “” button. To resume the cycle, press the “” button.

 **Note:**

The rinse cycle is performed in order to have the circuit cleaned with a pre-set amount of water to ensure proper machine performance. If the water tank is not filled up to the CALC CLEAN level, the machine might require more than one cycle.

19 When the amount of water needed for the rinse cycle has been completely dispensed, the machine automatically ends the descaling process.

20 At the end of the descaling process, the machine performs an automatic rinse cycle. Wait until it is over before removing and emptying the container.

21 Disassemble and wash the milk carafe as described in the “Weekly Cleaning of the Milk Carafe” chapter.

22 Empty the (internal) drip tray and place it back.

23 Put the AquaClean water filter (if any) back into the water tank.

 **Note:**

At the end of the descaling cycle, wash the brew group as described in the “Weekly Cleaning of the Brew Group” chapter.

Interruption of the Descaling Cycle

Once the descaling cycle has started, it must be completed; do not turn off the machine mid-cycle.




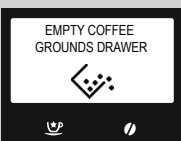



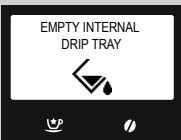

If the machine stops, you can quit the cycle by pressing the on/off button.


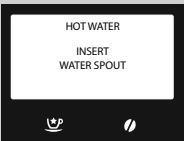
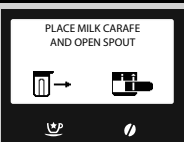

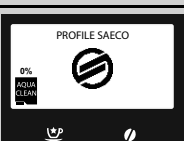
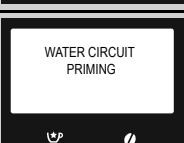
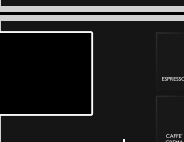

If this occurs, or in the event of power failure or accidental disconnection of the power cord, empty and rinse carefully the water tank, then fill it up to the CALC CLEAN level.

Follow the instructions provided in the "Manual Rinse Cycle" chapter before brewing any beverage.

If the cycle was not completed, the machine will require another descaling cycle to be performed as soon as possible.

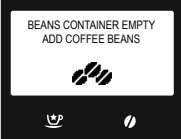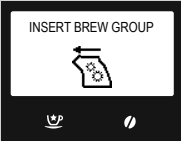DISPLAY MESSAGES

Displayed message	Meaning of the message
	Fill the coffee bean hopper.
	The brew group must be inserted into the machine.
	Insert the coffee grounds drawer and the internal drip tray.
	<p>Empty the coffee grounds drawer.</p> <p> Note: The coffee grounds drawer must be emptied only when the machine requires it and with the machine on. If the drawer is emptied with the machine turned off, the machine will not record the emptying operation.</p>
	Close the service door.
	Remove the water tank and fill it. You can fill the water tank also through the dedicated hole on the lid.
	<p>Open the service door and empty the internal drip tray.</p> <p> Note: If this operation is performed when the machine is on, it will record the coffee grounds drawer emptying and will reset the counter; therefore, you need to empty the coffee grounds as well.</p>

Displayed message	Meaning of the message
	<p>Insert the coffee bean hopper lid and/or beans lid.</p>
	<p>Insert the water dispensing spout to start dispensing. Press "ESC" to exit.</p>
	<p>Before dispensing, insert the milk carafe with the dispensing spout open.</p>
	<p>You need to descale the machine. Follow the steps described in the "Descaling" chapter of this manual. <u>Please note that not descaling your machine will ultimately make it stop working properly. In this case, repair is NOT covered under your warranty.</u></p>
	<p>The machine needs the "AquaClean" water filter to be replaced.</p>
	<p>The machine is priming the water circuit. Wait for this operation to be over.</p>
	<p>The red light flashes. Press any button to exit the stand-by mode.</p>
	<p>Take note of the code (E xx) displayed in the right bottom corner. Turn off the machine. Turn it back on after 30 seconds. Repeat the procedure 2 or 3 times. If the machine does not start, contact the Philips SAECO hotline in your country and quote the code shown on the display. Contact details can be found in the warranty booklet packed separately or at www.philips.com/support.</p>

TROUBLESHOOTING

This chapter summarizes the most common problems you could encounter with your machine.

If you are unable to solve the problem with the information below, visit www.saeco.com/support for a list of frequently asked questions or contact the Philips Saeco hotline in your country.

Contact details can be found in the warranty booklet packed separately or at www.saeco.com/support.

Machine actions	Causes	Solutions
The machine does not turn on.	The machine is not connected to the electric network.	Connect the machine to the electric network.
	The power button is on position "0".	Check that the power button is set to "I".
The drip tray gets filled although no water is drained.	Water is sometimes drained automatically by the machine into the drip tray to manage the rinsing of the circuits and ensure optimum machine performance.	This is a normal behaviour of the machine.
Coffee is not hot enough.	The cups/mugs are cold.	Preheat the cups/mugs with hot water or use the hot water dispensing spout.
	The beverage temperature in the programming menu is set on Low.	Make sure that the temperature in the programming menu is set on Normal or High.
	You added cold milk to the coffee.	Cold milk lowers the temperature of the final product. Preheat milk before adding it to the beverage.
No hot water is dispensed.	The steam/hot water dispensing spout is clogged or dirty.	Clean the hot water dispensing spout. Inspect the dispensing spout to check that it is not clogged. Make a hole in the limescale using a pin or a needle.
The machine does not fill the cup/mug.	The machine has not been programmed.	Access the beverage programming menu and adjust the coffee length setting according to your personal taste for each type of beverage.
Coffee does not have enough crema (see note).	The blend is unsuitable, coffee is not freshly roasted or the grind is too coarse.	Change coffee blend or adjust grinding as explained in the "Adjusting the Ceramic Coffee Grinder" chapter.
	The coffee beans or the pre-ground coffee are too old.	Make sure that you use fresh coffee beans or pre-ground coffee.
Milk does not froth.	The milk dispensing spout has not been pulled out.	Check that the milk dispensing spout has been pulled out correctly up to the "☉" icon.
	The carafe has not been correctly reassembled or with all its components.	Make sure the tube is correctly inserted. All its components have to be correctly reassembled, as described in the "Weekly Cleaning of the Milk Carafe" section.

Machine actions	Causes	Solutions
The machine takes a long time to warm up or the amount of water dispensed from the wand is too little.	The machine circuit is clogged by limescale.	Descale the machine.
The brew group cannot be removed.	The brew group is out of place.	Turn on the machine. Close the service door. The brew group automatically returns to the initial position.
	The coffee grounds drawer is inserted.	Remove the coffee grounds drawer before removing the brew group.
There is too much ground coffee under or over the brew group.	The coffee used may not be suitable for automatic machines.	It may be necessary to change the type of coffee or the coffee grinder settings (see the "Adjusting the Ceramic Coffee Grinder" chapter).
	The machine is adjusting the coffee grinder for a new kind of coffee beans or pre-ground coffee.	The machine automatically adjusts itself after brewing several cups of coffee in order to optimise extraction in relation to the compactness of ground coffee. It may be necessary to brew 2 or 3 products to fully adjust the coffee grinder. This is not a machine malfunction.
The coffee grounds produced by the machine are too humid or too dry.	Adjust the coffee grinder.	Adjusting the ceramic coffee grinder affects the quality of residues. If the residues are too humid, set a coarser grind. If the residues are too dry, set a finer grind. Refer to the "Adjusting the Ceramic Coffee Grinder" chapter.
The machine grinds the coffee beans but no coffee is brewed (see note).	There is no water.	Fill the water tank and prime the circuit (see the "Manual Rinse Cycle" chapter).
	The brew group is dirty.	Clean the brew group (see the "Weekly Cleaning of the Brew Group" chapter).
	This might occur when the machine is automatically adjusting the dose.	Brew some cups of coffee as described in the "Saeco Adapting System" chapter.
	The dispensing spout is dirty.	Clean the dispensing spout.
The coffee is too weak (see note).	This might occur when the machine is automatically adjusting the dose.	Brew some cups of coffee as described in the "Saeco Adapting System" chapter.
	The ground coffee is too coarse.	Change coffee blend or adjust grinding as explained in the "Adjusting the Ceramic Coffee Grinder" chapter.
	The coffee bean hopper selector switch has been shifted.	Move the selector switch to the "☞" position.
Coffee is brewed slowly (see note).	The ground coffee is too fine.	Change coffee blend or adjust grinding as explained in the "Adjusting the Ceramic Coffee Grinder" chapter.
	The circuits are clogged.	Perform a descaling cycle.
	The brew group is dirty.	Clean the brew group (see the "Weekly Cleaning of the Brew Group" chapter).


Machine actions	Causes	Solutions
Coffee leaks out of the dispensing spout.	The dispensing spout is clogged or not correctly inserted.	Clean the dispensing spout and its holes and insert it back correctly.
The dispensing spout cannot be installed onto the milk carafe.	The pin is in the wrong position.	Manually push the pin to the correct position and insert the carafe dispensing spout.
The machine does not connect to the application.	The mobile device is too far away from the machine.	Do not step more than 5 metres away from the machine while using the mobile device.

**Note:**

These problems can be considered normal if the coffee blend has been changed or if the machine has just been installed. In this case, wait until the machine performs a self-adjusting operation as described in the “Saeco Adapting System” chapter.


ENERGY SAVING

Stand-by

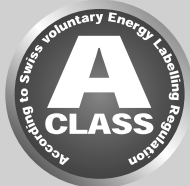


The Saeco fully automatic espresso coffee machine is designed for energy saving, as proven by the Class A energy label.

After a certain time of inactivity that can be set by the user (see the “Machine Programming” chapter), the machine turns off automatically. If a product has been brewed, the machine performs a rinse cycle. In stand-by mode, the energy consumption is below 1Wh.

To turn on the machine, press the “” button for a few seconds (if the power button on its back is set to “I”). If the boiler is cold, the machine performs a rinse cycle.

The machine status can be manually changed to stand-by mode by keeping the STAND-BY button pressed for 3 seconds.

**Note:**

- 1 The machine will not go into stand-by mode if the service door is open.
- 2 When the stand-by mode is activated, the machine may perform a rinse cycle. The cycle can be interrupted by pressing the “” button.

The machine can be reactivated by:

- 1 Pressing any button on the control panel.
- 2 Opening the service door (when closing the door, the machine goes back to stand-by mode).

The red indicator light on the “” button flashes when the machine is in stand-by mode.

TECHNICAL SPECIFICATIONS

The manufacturer reserves the right to make changes to the technical specifications of the product.

Nominal voltage - Power rating - Power supply	See data plate on the appliance
Housing material	Thermoplastic material / Metal
Size (w x h x d)	210 x 360 x 460 mm
Weight	13 kg
Power cord length	800-1200 mm
Control panel	Front panel
Cup size	110 mm
Water tank	1.7 litres - Removable type
Coffee bean hopper capacity	270 g
Coffee grounds drawer capacity	20
Pump pressure	15 bar
Boiler	Stainless steel
Safety devices	Boiler pressure safety valve – Double safety thermostat - Thermal fuse
Bluetooth	Bluetooth Smart (low energy)
Maximum use distance	5 m
Tablet compatibility	Avanti App is compatible with iPad 3/4/Air/mini retina, running iOS7 and newer; with Samsung Galaxy Tab 3 (8.0")/Tab 4 (10.1")/Note pro LTE (12.2"), Nexus 7 2013 (7"), Sony Xperia Z LTE (10.1"), running Android v.4.3 and newer, and Bluetooth version 4.0 and newer.

WARRANTY AND SERVICE

Warranty

For detailed information on your warranty and related conditions, please read the warranty booklet supplied separately.

Service

We want to ensure that you remain satisfied with your machine. If you have not already done so, please register your purchase at **www.saeco.com/welcome**. This will enable us to stay in contact with you and send you cleaning and descaling reminders.

If you need service or support, please visit the Philips website at **www.saeco.com/support** or contact the Philips Saeco hotline in your country. Contact details can be found in the warranty booklet supplied separately or at **www.saeco.com/support**.

ORDERING MAINTENANCE PRODUCTS

For cleaning and descaling, use Saeco maintenance products only. You can purchase these products at the Philips online shop (if available in your country) at **www.shop.philips.com/service**, from your local dealer or at authorised service centres.

If you have any difficulties obtaining maintenance products for your machine, please contact the Philips Saeco hotline in your country.

Contact details can be found in the warranty booklet packed separately or at **www.saeco.com/support**.

Overview of maintenance products

- Descaling solution CA6700





- AquaClean filter CA6903











- Grease HD5061









- Coffee Oil Remover CA6704



- Milk Circuit Cleaner CA6705

Name	Icon on the display	Coffee quantity in cup (approx.)	Milk dispensing time (approx.)
Espresso		Standard amount: 50 ml Quantity variation: 30÷70 ml	
Espresso Lungo		Standard amount: 70 ml Quantity variation: 40÷110 ml	
Caffè crema		Standard amount: 125 ml Quantity variation: 70ml÷280 ml	
Coffee		Standard amount: 110 ml Quantity variation: 70÷140 ml	
Espresso Macchiato		Standard amount: 50 ml Quantity variation: 30÷70 ml	Standard time: 5 sec Time variation: 5÷30 sec
Cappuccino		Standard amount: 54 ml Quantity variation: 30÷170 ml	Default: 20 sec Time variation: 10÷50 sec
Latte Macchiato		Standard amount: 32 ml Quantity variation: 30÷170 ml	Default: 25 sec Time variation: 10÷75 sec
Frothed milk			Default: 30 sec Time variation: 10÷75 sec

Name	Icon on the display	Coffee quantity in cup (approx.)	Milk dispensing time (approx.)
Ristretto		Standard amount: 30 ml Quantity variation: 20÷40 ml	
Espresso intenso		Standard amount: 70 ml Quantity variation: 40÷110 ml	
Espresso mild		Standard amount: 40 ml Quantity variation: 30÷70 ml	
Energy Coffee		Standard amount: 190 ml Quantity variation: 110÷320 ml	
Flat White (Café au lait)		Standard amount: 70 ml Quantity variation: 30÷260 ml	Standard amount: 20 sec Time variation: 10÷50 sec
Hot Water		Standard amount: 300 ml Quantity variation: 50÷450 ml	

02

Rev.00 del 15-09-15



421946029351

EN

02

The manufacturer reserves the right to make changes without prior notice.



www.philips.com/saeco